

Ambient Air Temperature Sensor




Special Tool(s) / General Equipment

Flat-Bladed Screwdriver

Removal

NOTE: *Removal steps in this procedure may contain installation details.*

- Using a suitable tool, pry and detach the ambient air temperature sensor bezel from the RH exterior mirror housing.
Use the General Equipment: Flat-Bladed Screwdriver
- Disconnect the ambient air temperature sensor electrical connector and remove the ambient air temperature sensor.

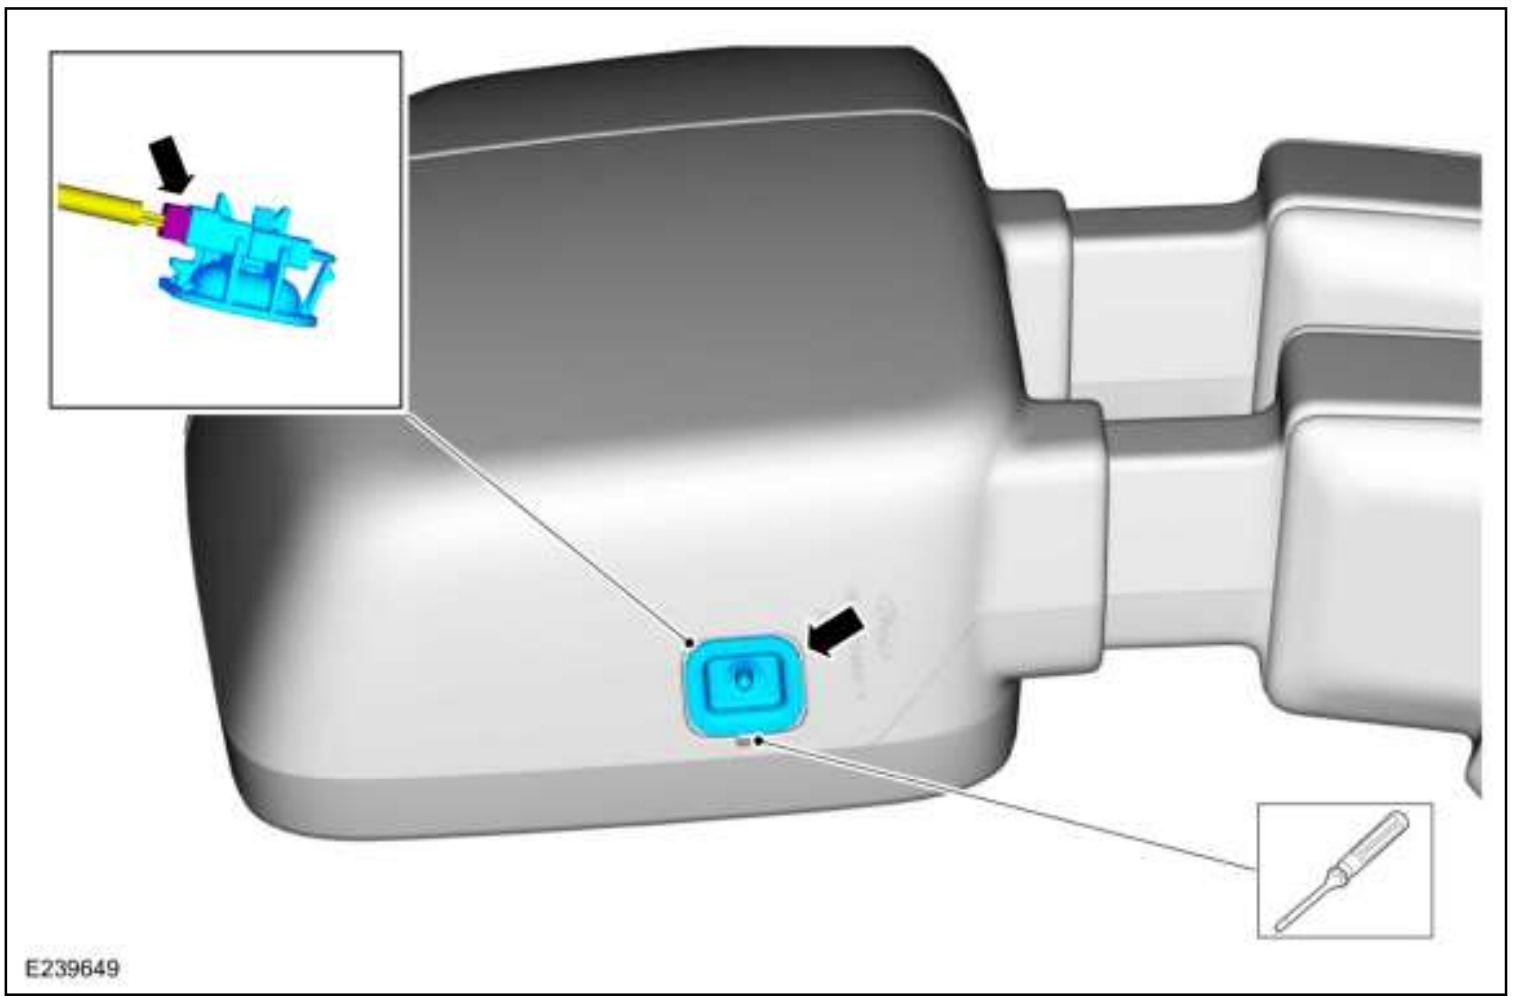

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary if replacing the ambient air temperature sensor.*

If replacing the ambient air temperature sensor a reset must be performed.

Refer to: [Reset the Outside Air Temperature Sensor Learned Values](#) (412-00 Climate Control System - General Information, General Procedures) .

© Copyright 2022, Ford Motor Company.
