

Light Sensor



Removal

NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** Typical application shown.

Remove the light sensor.

1. Using a non-marring tool release and position up the light sensor.
2. Disconnect the light sensor electrical connector and remove the light sensor.

