

BATTERY JUNCTION BOX [BCMC]

Fuse	Amps	Circuits protected
F60	15	Upfitter 1
F61	15	Upfitter 2
F62	10	Upfitter 3
F63	10	Upfitter 4
F64	25	Transfer Case Control Module (TCCM)
F65	15	Transmission Control Module (TCM)
F67	20	Transmission fluid auxiliary pump
F69	30	Windshield wiper motor
F80	15	Not used
F82	25	Transfer Case Control Module (TCCM)
F83	50	Electric booster heater
F84	50	Electric booster heater
F85	50	Electric booster heater
F86	25	Glow Plug Control Module (GPCM)
F91	20	Trailer Module (TRM)
F95	15	Secondary On-Board Diagnostic Control Module C (SOBDMC)
F98	10	Engine coolant valve assembly