

# Wheel Hub




## Special Tool(s) / General Equipment

Hydraulic Press
--------------------

## Removal

1. Remove the axle shaft.  
Refer to: [Axle Shaft](#) (205-02C Wheel Hubs and Bearings - 3/4 Floating Axle, Removal and Installation) .
2. Remove and discard the wheel end hub bolt and separate the axle shaft from the wheel hub assembly.  
Use the General Equipment: Hydraulic Press

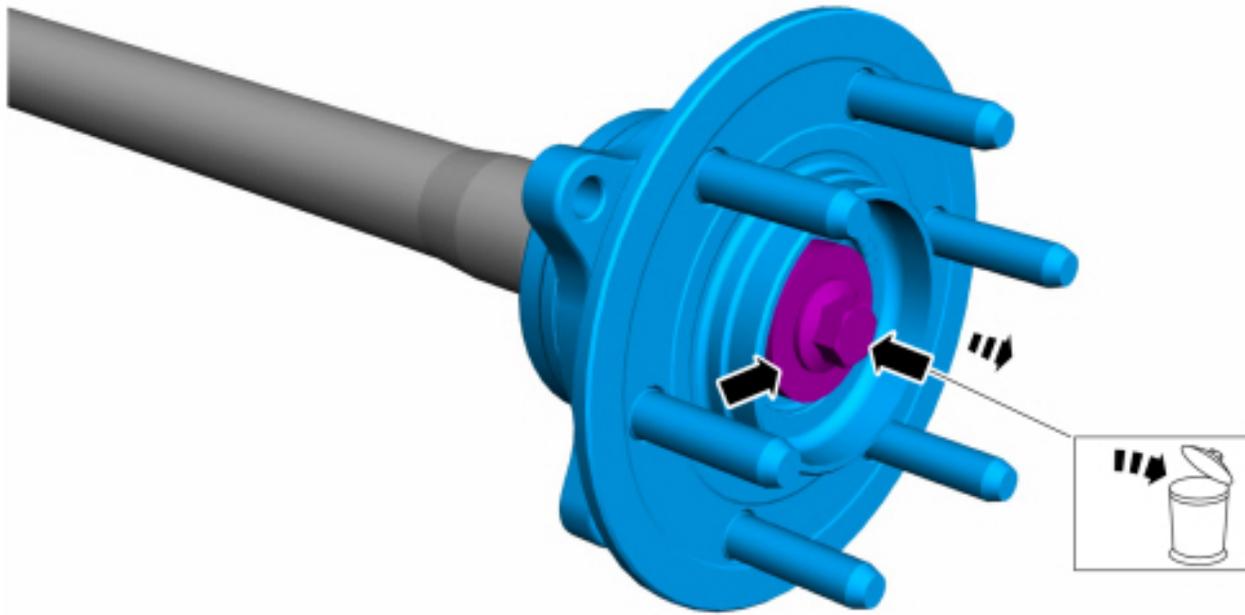


E341044




## Installation

1. Install the inboard washer.
2. Using general equipment, press the wheel hub assembly onto the axle shaft.  
Use the General Equipment: Hydraulic Press

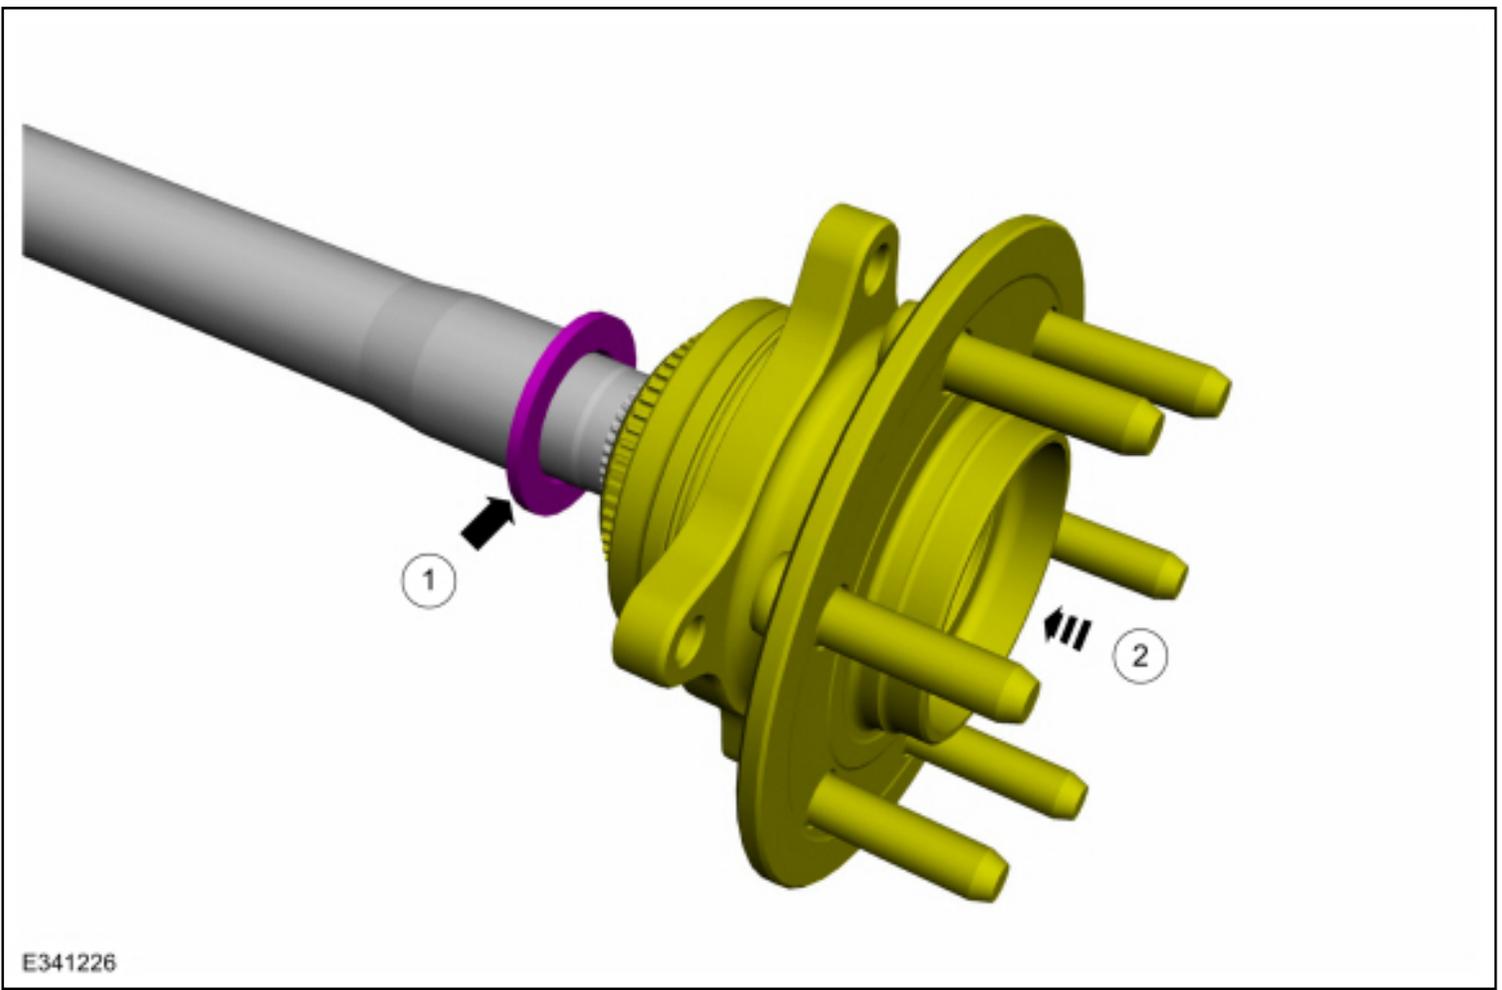

2. **NOTE:** *Make sure that the threaded holes are clean and free of foreign matter.*

Using compressed air, clean the internal threads of axle shaft.

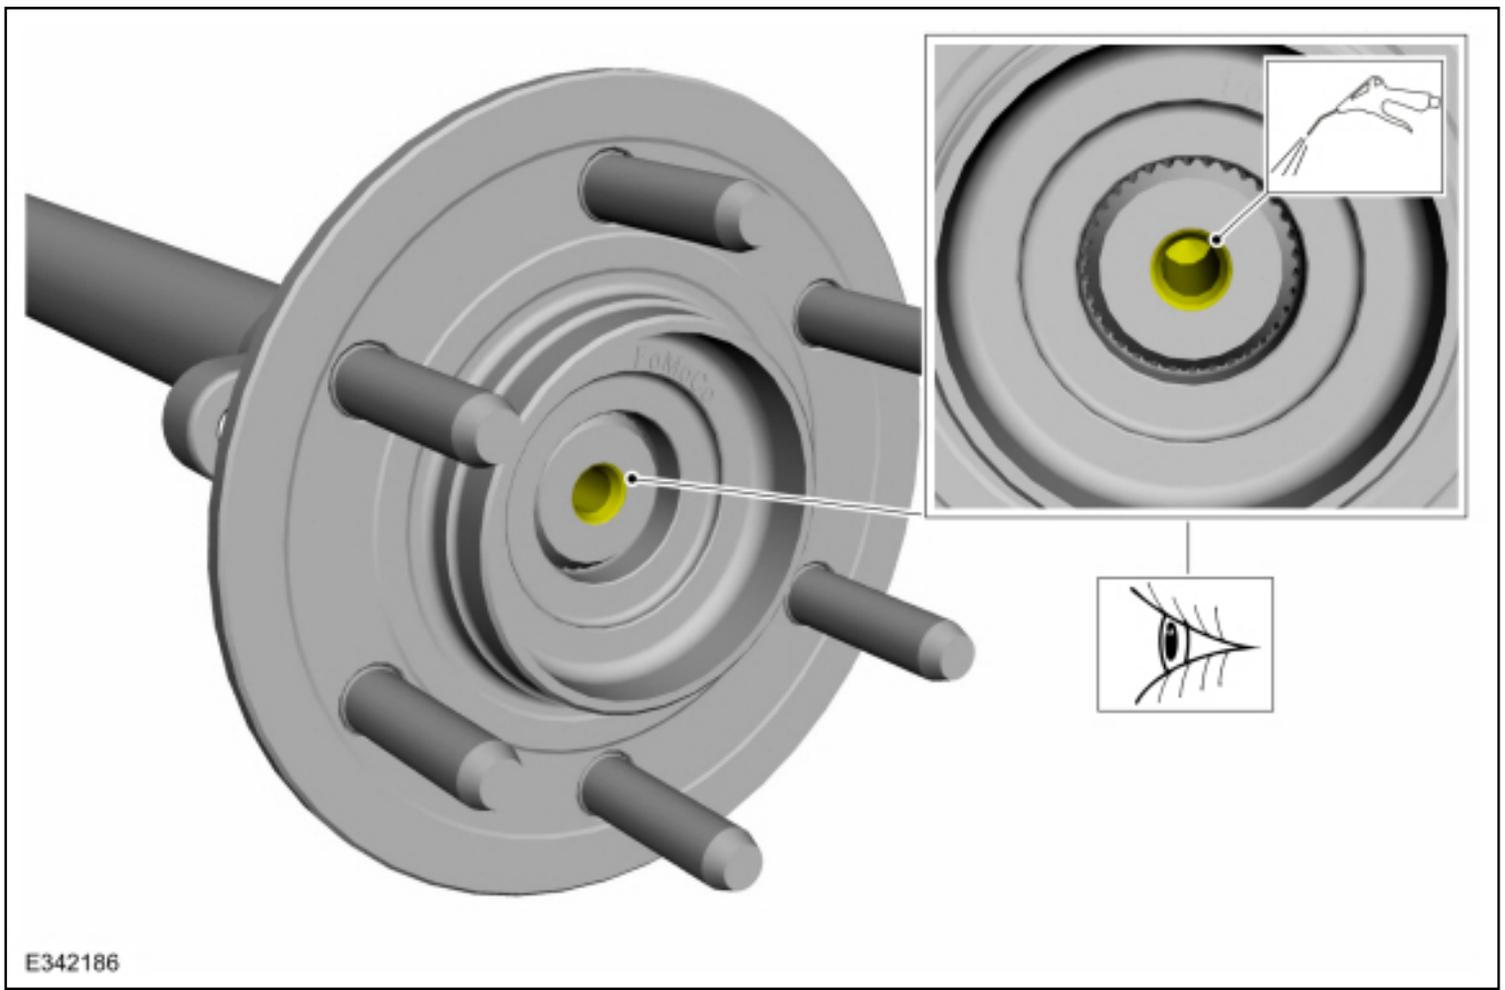


3. **NOTE:** *Make sure a new bolt is installed.*

Install the washer and tighten the bolt.

*Torque :*

Stage 1: 52 lb.ft (70 Nm)

Stage 2: 90°

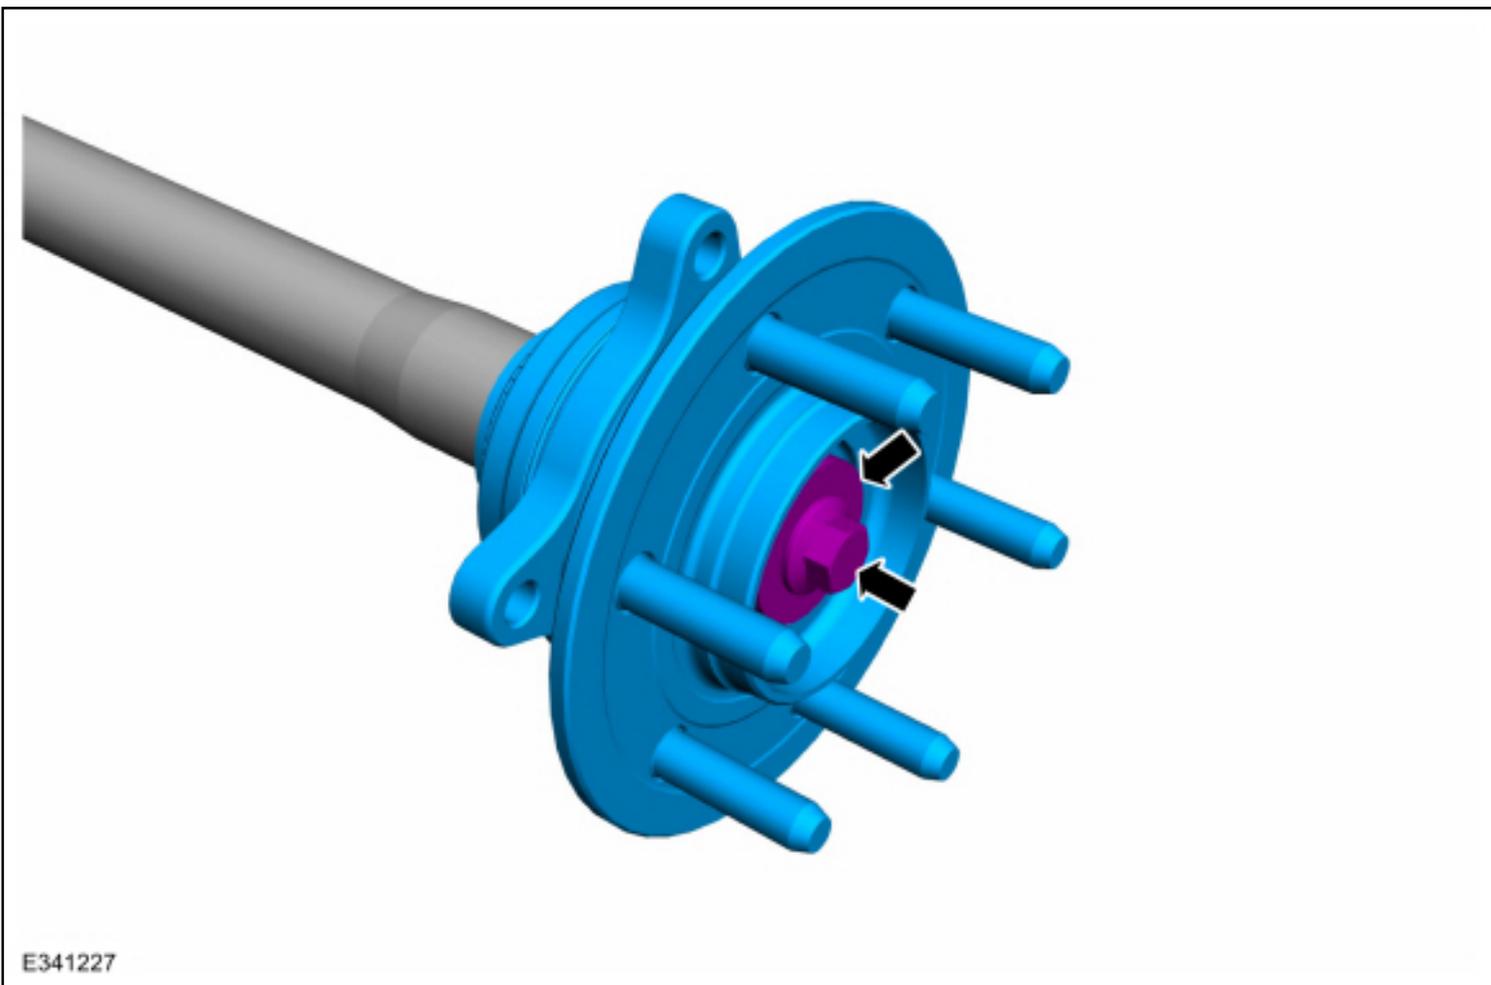

4. Install the axle shaft.

Refer to: [Axle Shaft](#) (205-02C Wheel Hubs and Bearings - 3/4 Floating Axle, Removal and Installation) .

© Copyright 2022, Ford Motor Company.

---