

Driver Side Register




Removal

NOTE: Removal steps in this procedure may contain installation details.


1. **NOTE:** The push pin must be replaced each time the bezel is removed.

Release the retainers and remove the LH register bezel.


- Remove and discard the push pin.

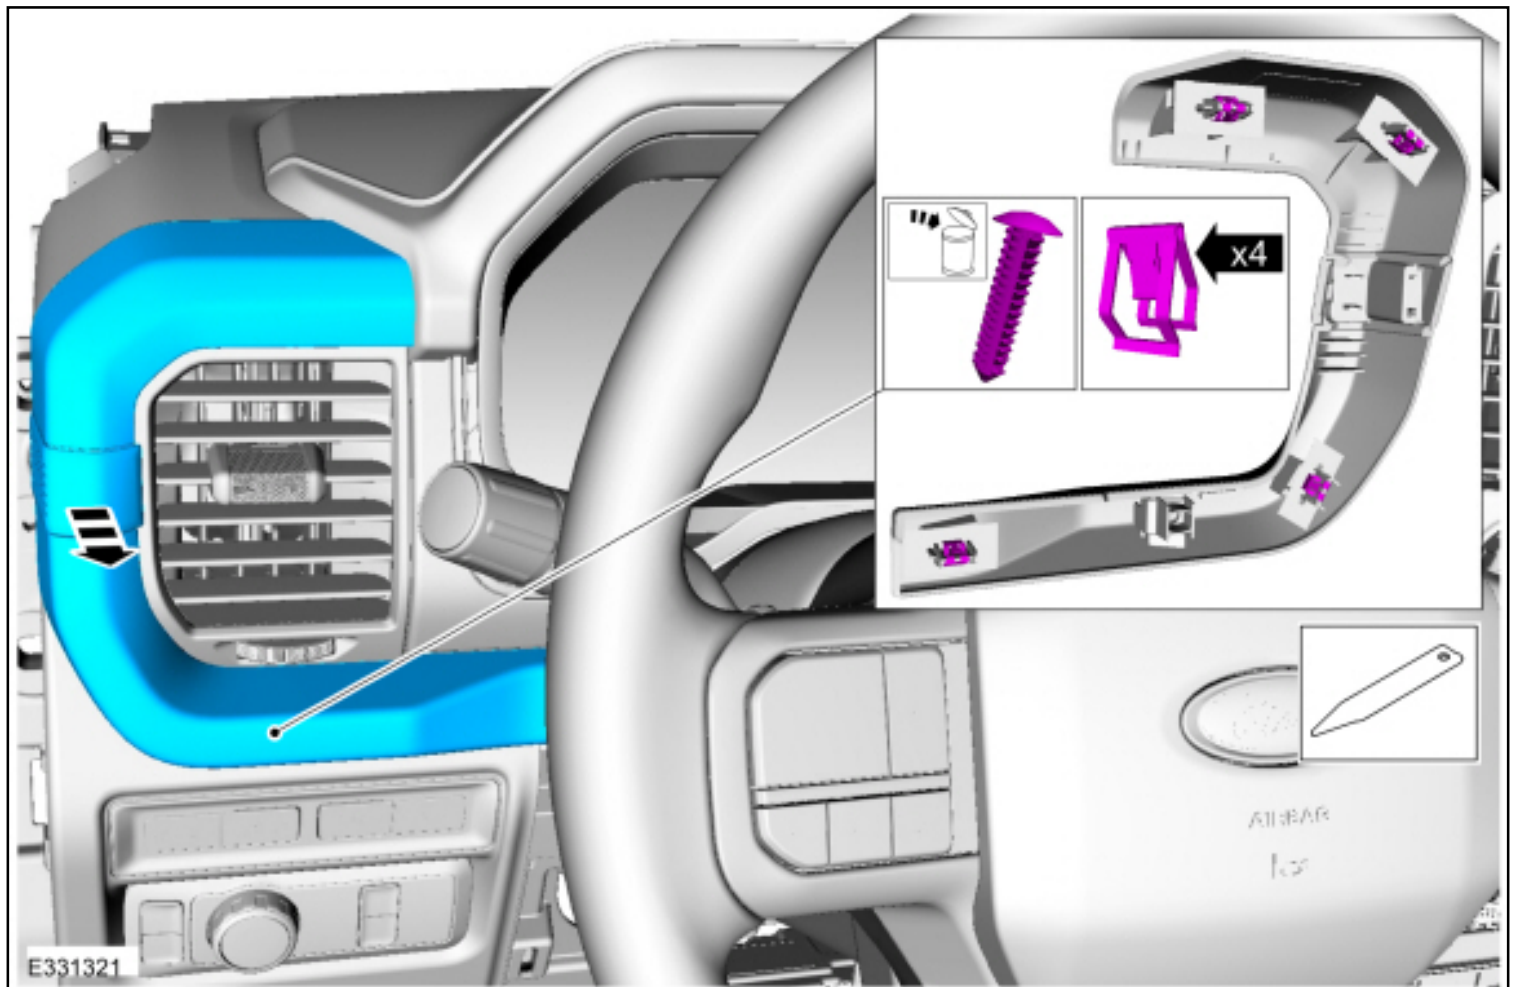

2. Remove the two bolts and the LH register.
Torque : 22 lb.in (2.5 Nm)

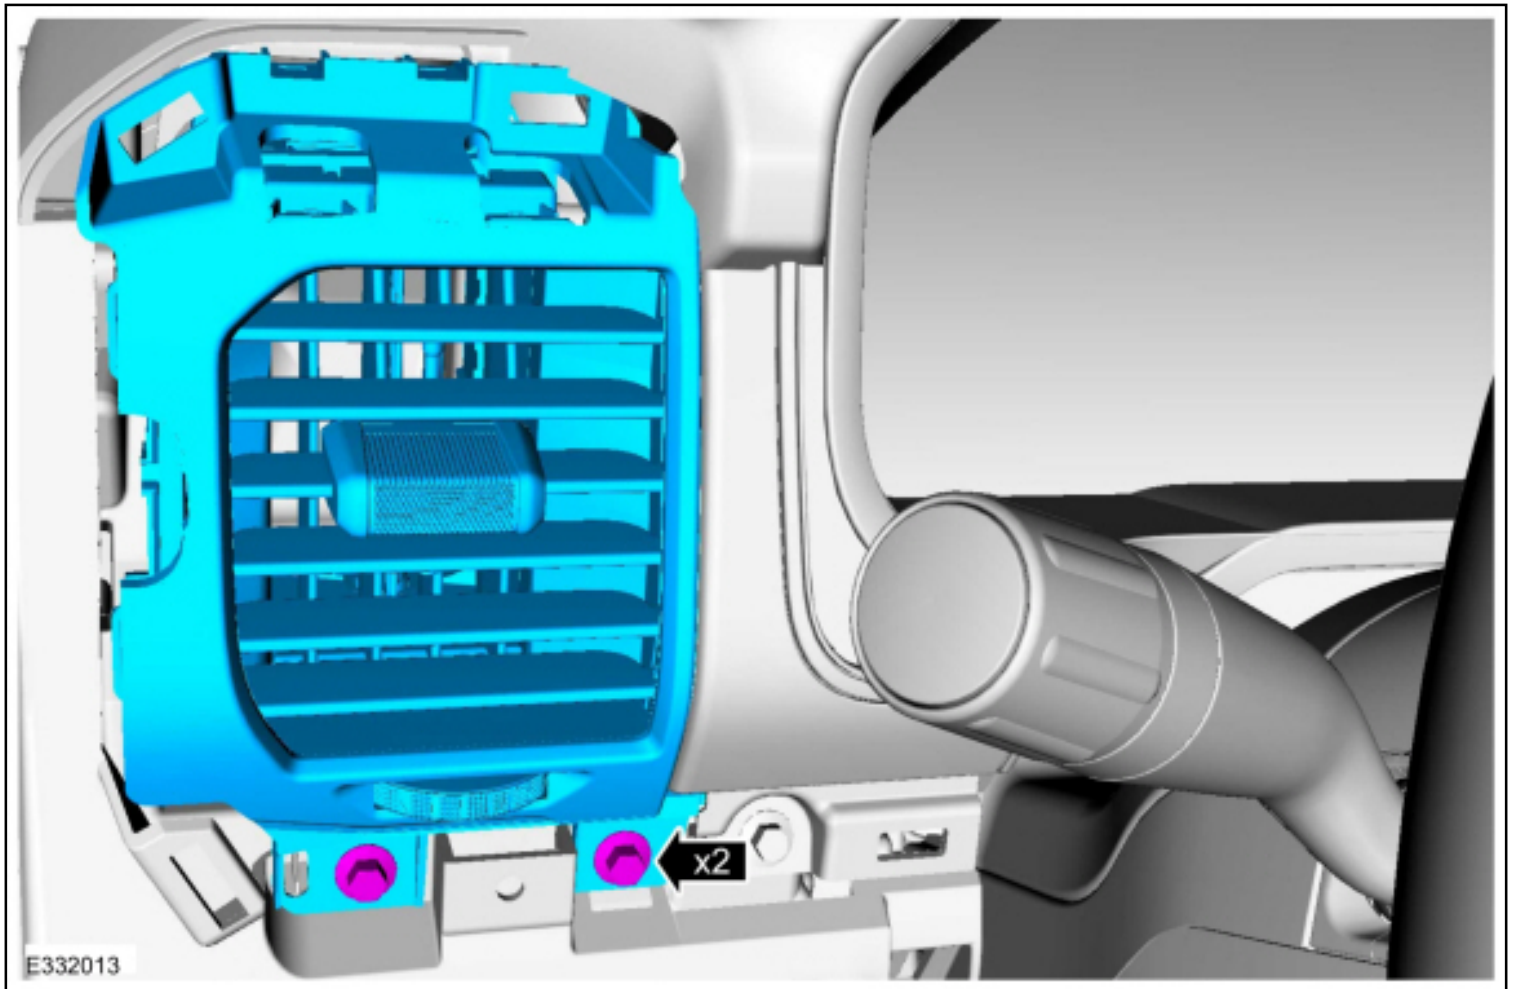

3. Release the tabs and remove the register.

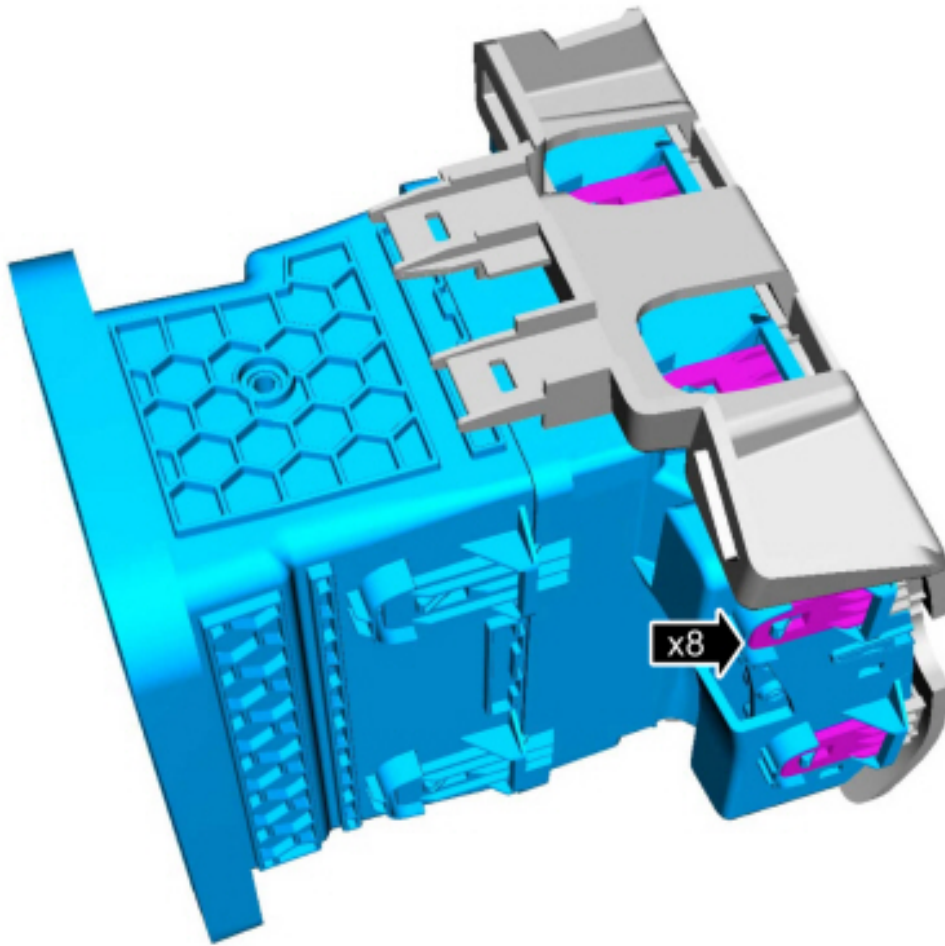

E332011



Installation

1. Authoring Template

© Copyright 2021, Ford Motor Company.
