

Steering Column Shrouds




Special Tool(s) / General Equipment


Flat Headed Screw Driver
Interior Trim Remover

Removal

- 1. Fully extend and lower the steering column.

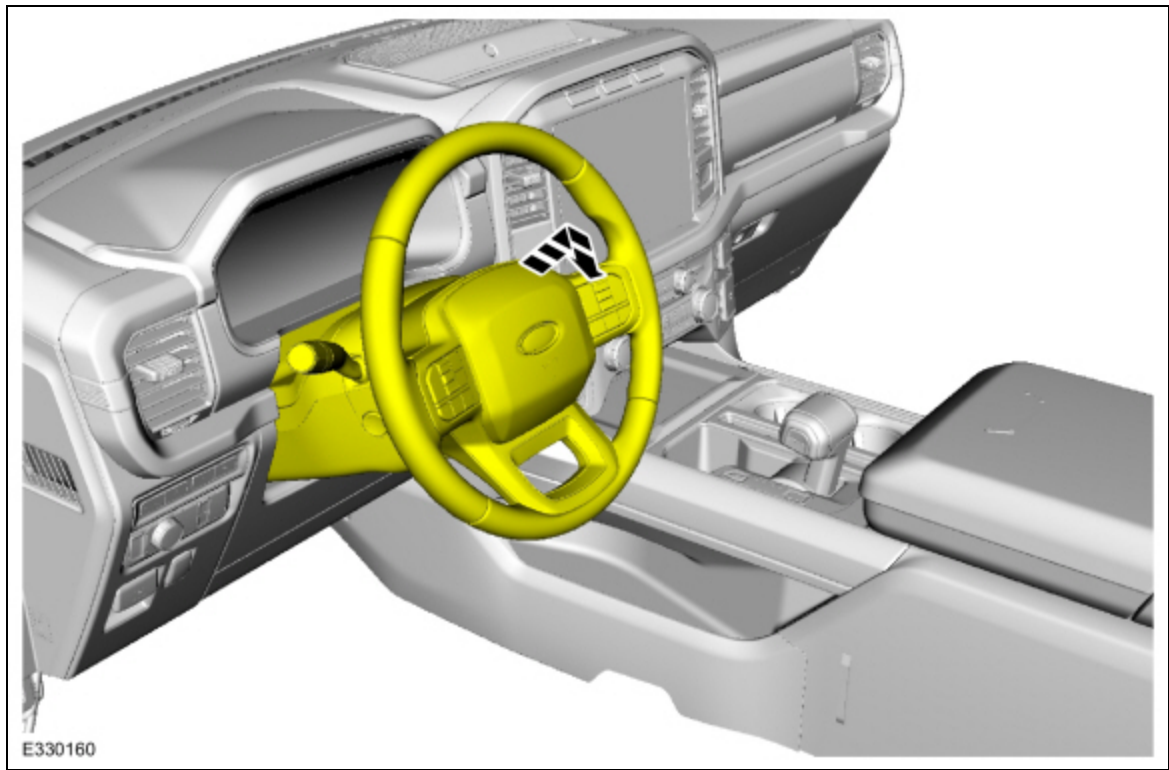


- 2. Release the tabs and disconnect the gap hider from the upper steering column shroud.
Use the General Equipment: Interior Trim Remover

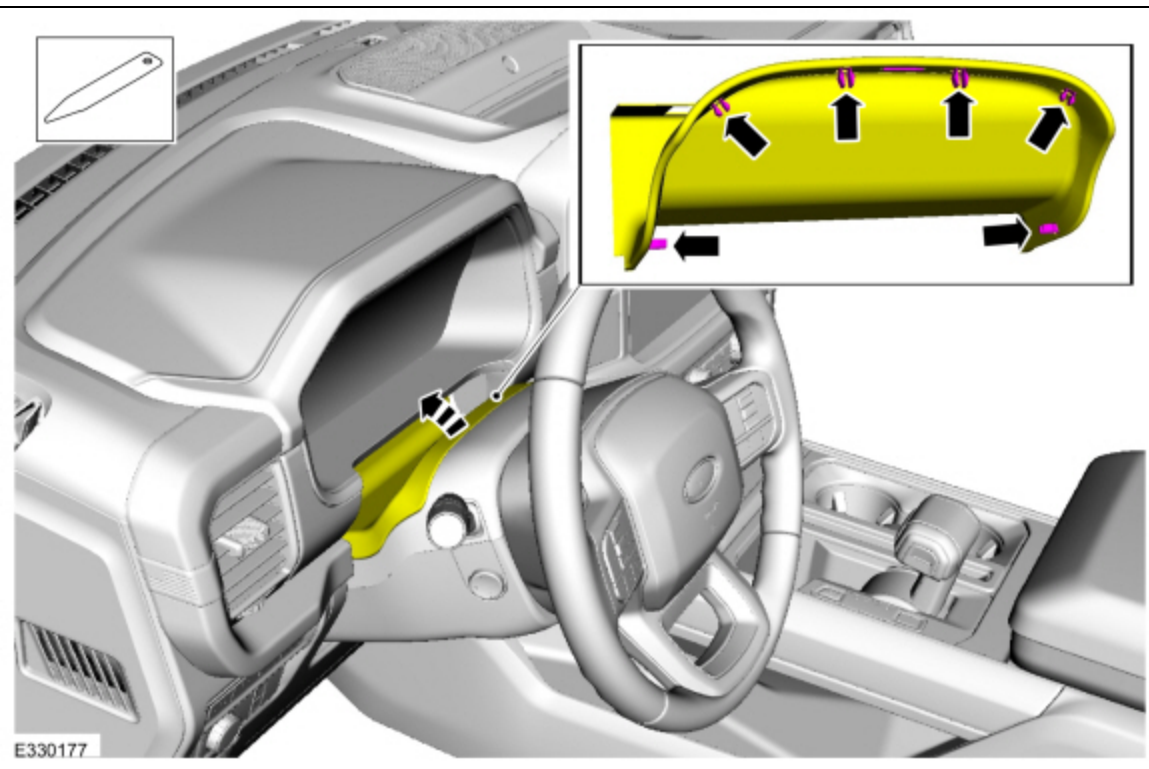

Vehicles with column shift


3. **NOTE:** Gear selector lever removed for clarity.

Release the tabs and position the gear selector boot aside.
Use the General Equipment: Interior Trim Remover

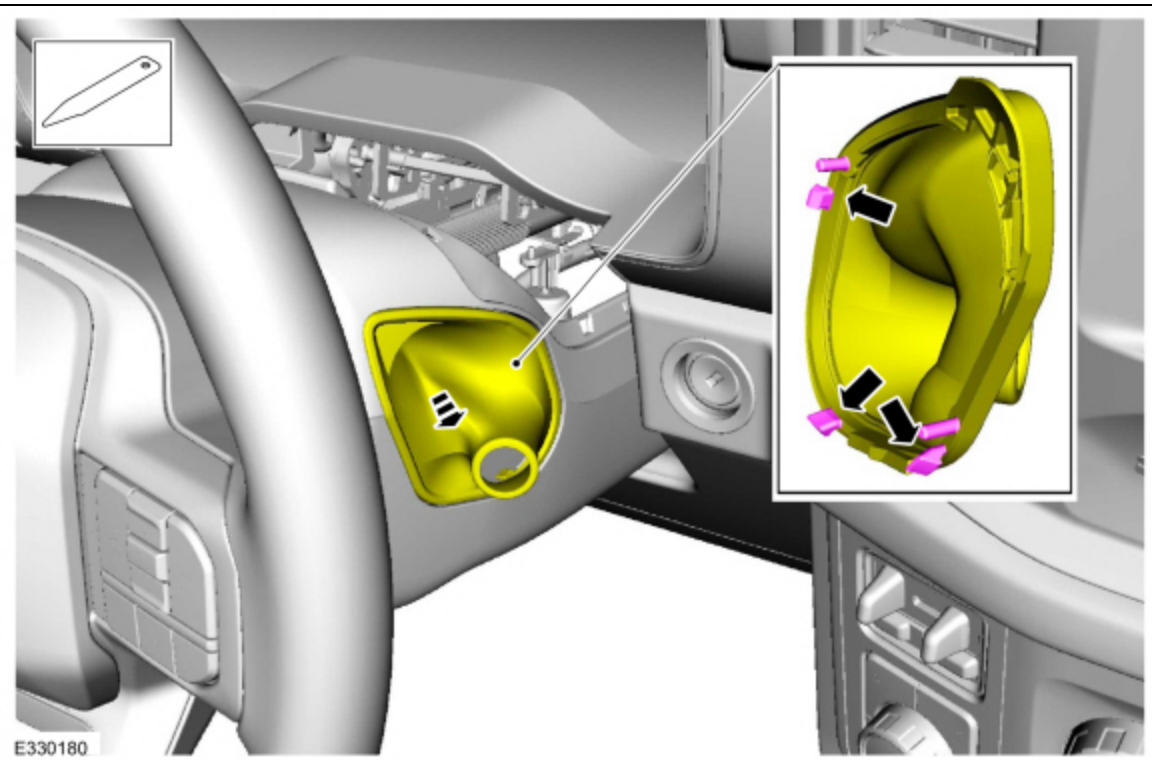


Vehicles with internal combustion engine

4. Remove the lower instrument panel trim panel.
 1. Release the clips and the tabs and position the lower instrument panel trim panel downward.
Use the General Equipment: Interior Trim Remover
 2. Remove the lower instrument panel trim panel bolts.

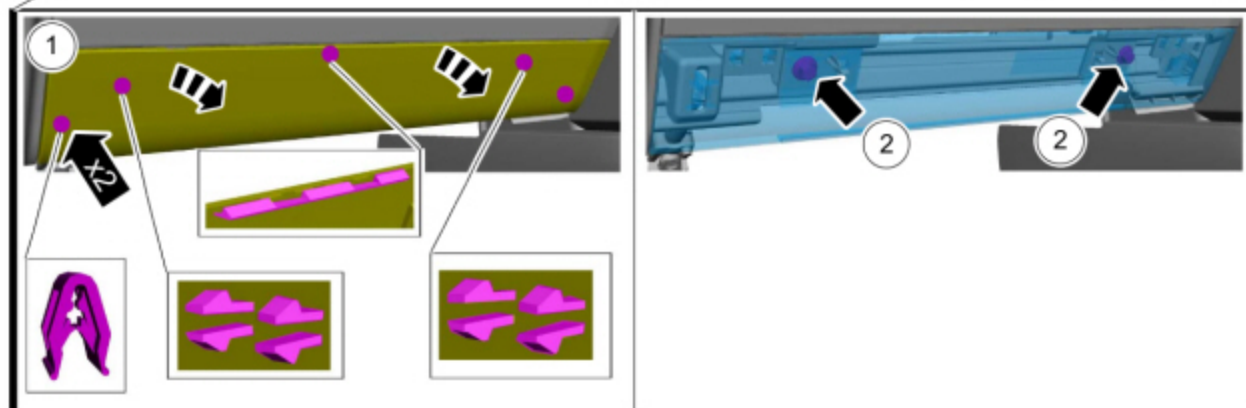


E344966

5. Release the clips and remove the instrument panel upper trim panel.
Use the General Equipment: Interior Trim Remover

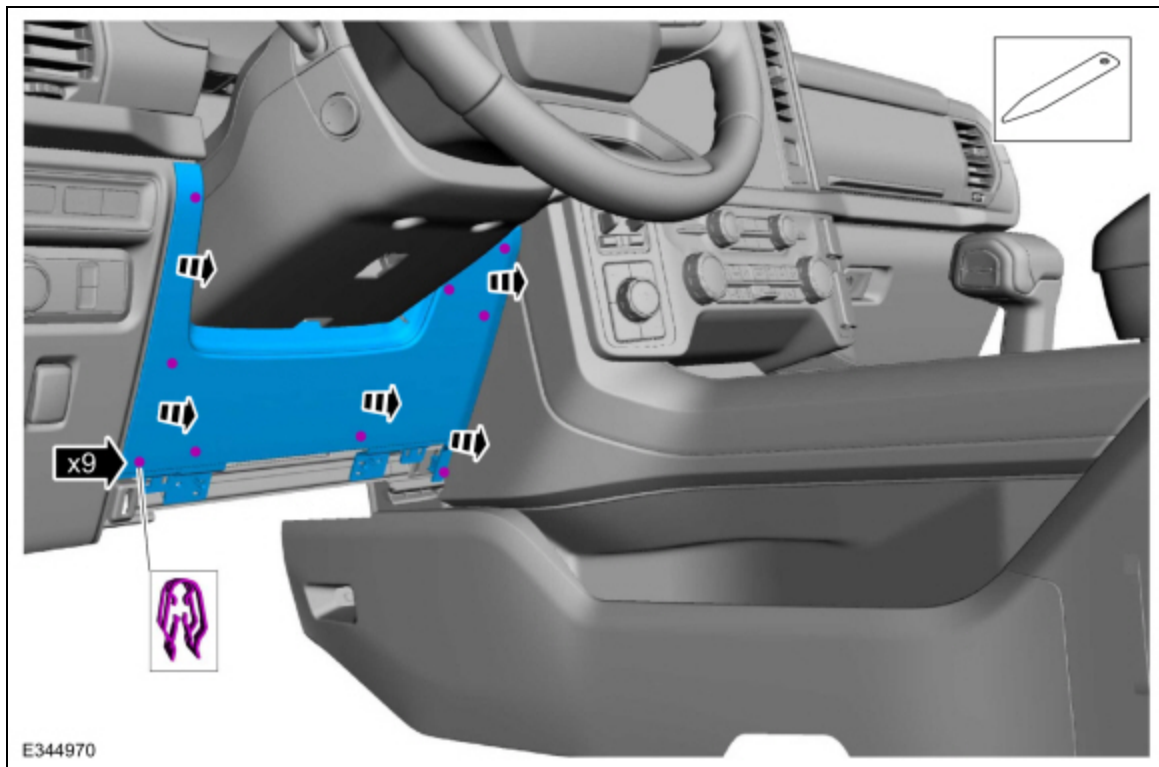

Battery Electric Vehicle (BEV)


6. Release the clips and position the instrument panel upper trim panel screw cover upward.
Use the General Equipment: Interior Trim Remover

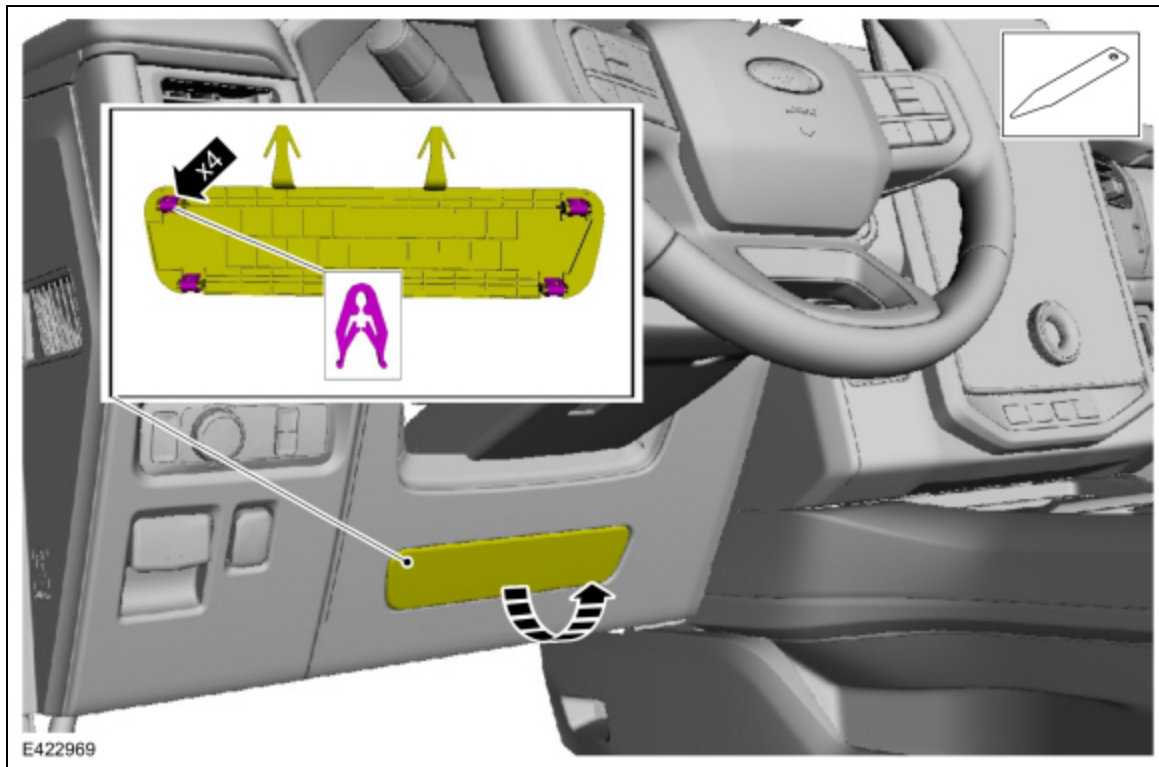

7. Remove the instrument panel upper trim panel bolts.









8. Release the clips and remove the instrument panel upper trim panel.
Use the General Equipment: Interior Trim Remover

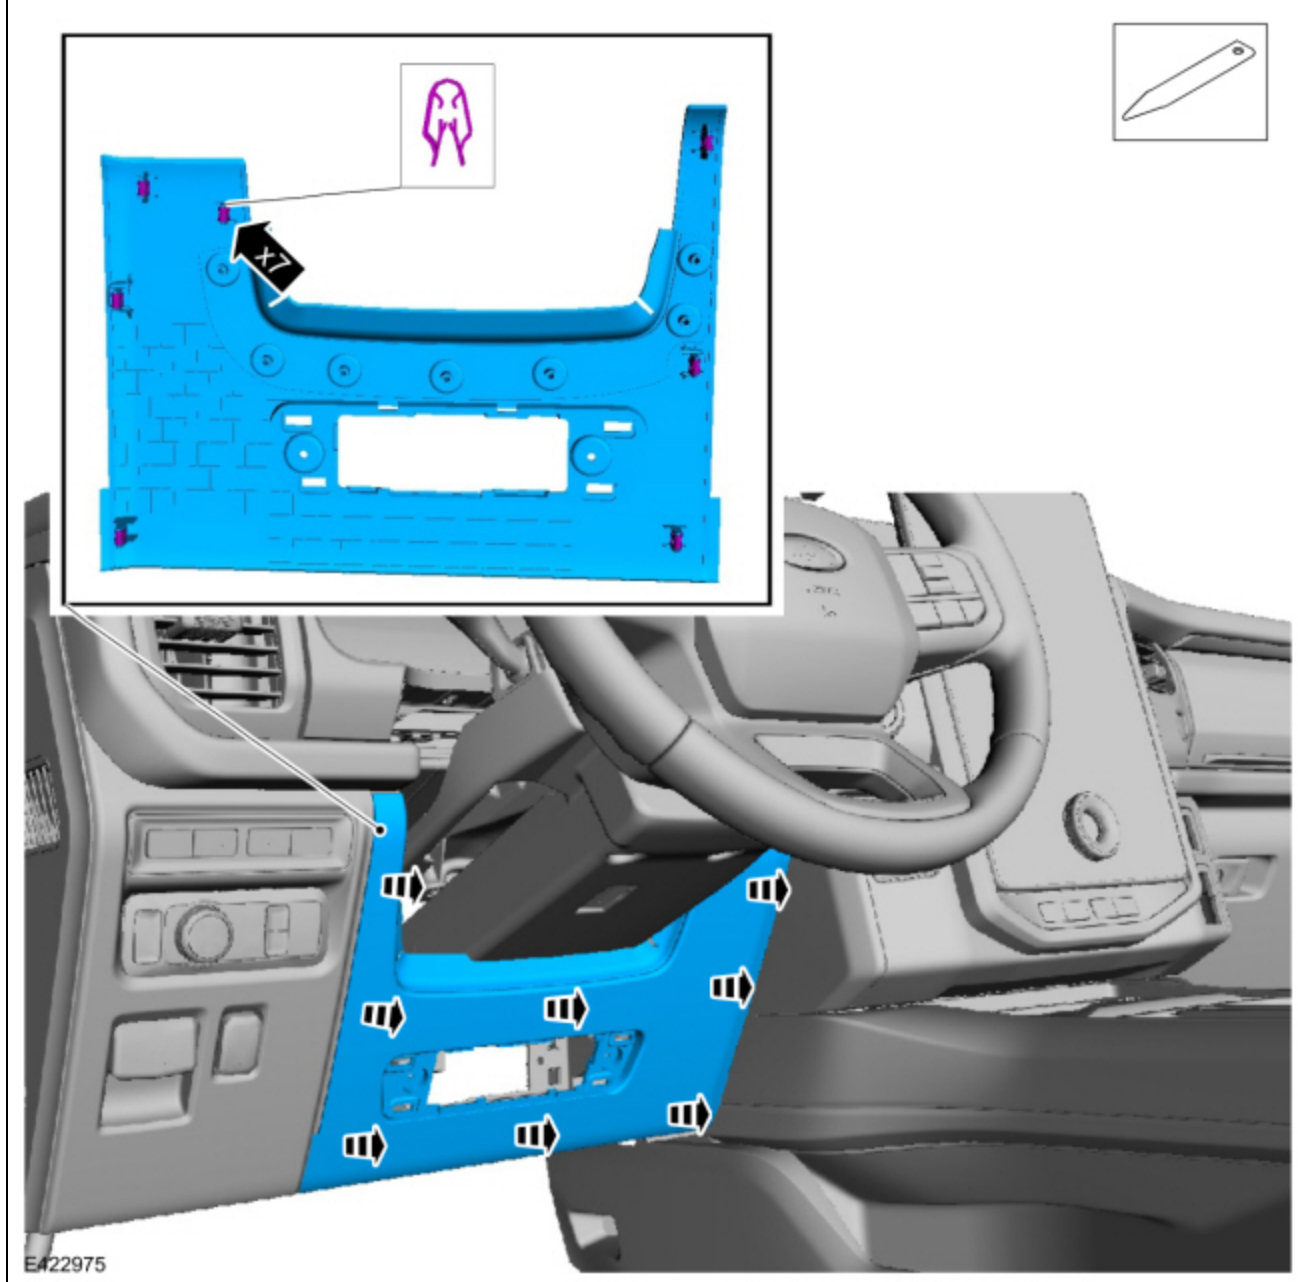

All vehicles


9. Release the retainers
1. Rotate the steering wheel 90 degrees to the left.
 2. Release the **LH** retainer.
Use the General Equipment: Flat Headed Screw Driver
 3. Rotate the steering wheel 180 degrees to the right.
 4. Release the **RH** retainer.
Use the General Equipment: Flat Headed Screw Driver

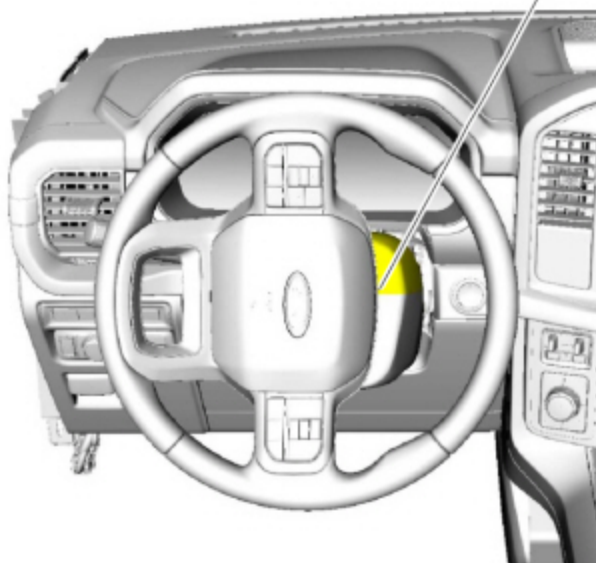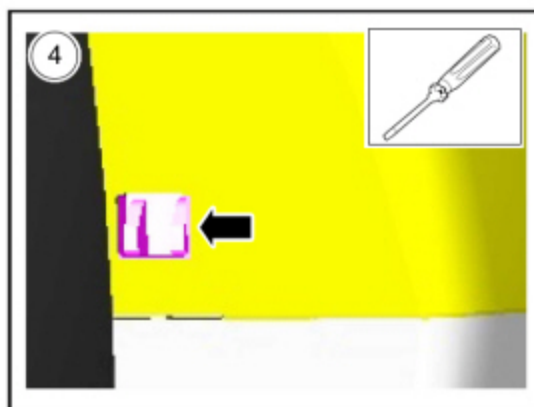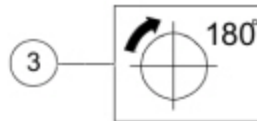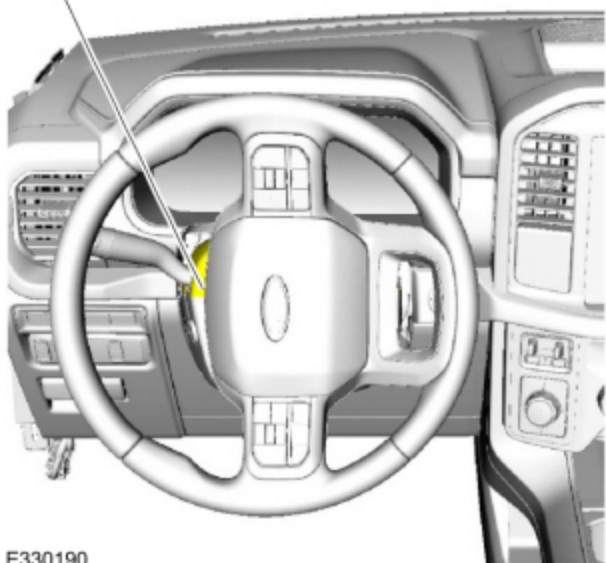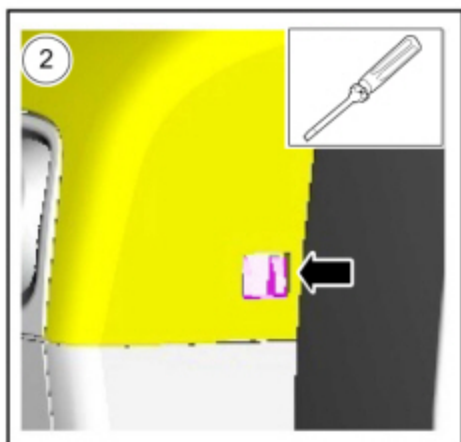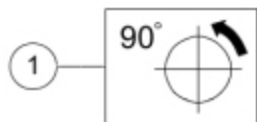

E330190


10. **NOTE:** *Gap hider removed for clarity.*

Release the outer clips on both sides and remove the upper steering column shroud.
Use the General Equipment: Interior Trim Remover

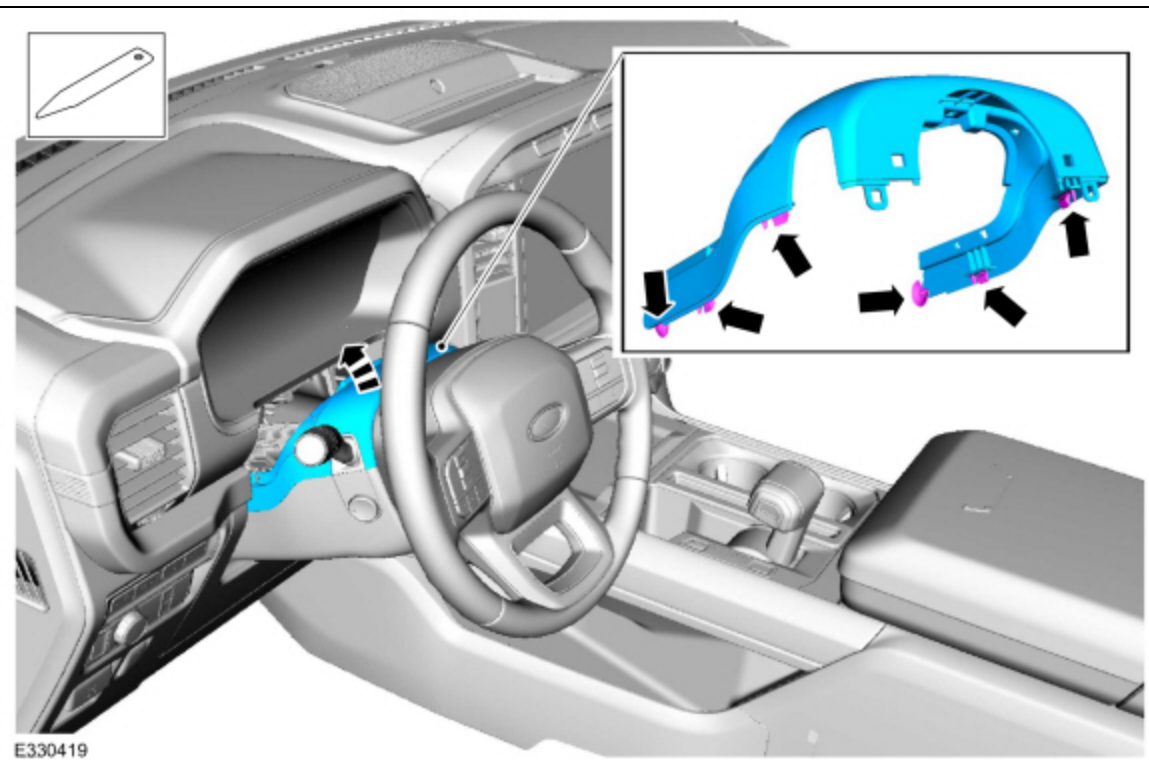

11. **NOTE:** *Steering column opening trim panel removed for clarity.*

Remove the bolts and the lower steering column shroud.

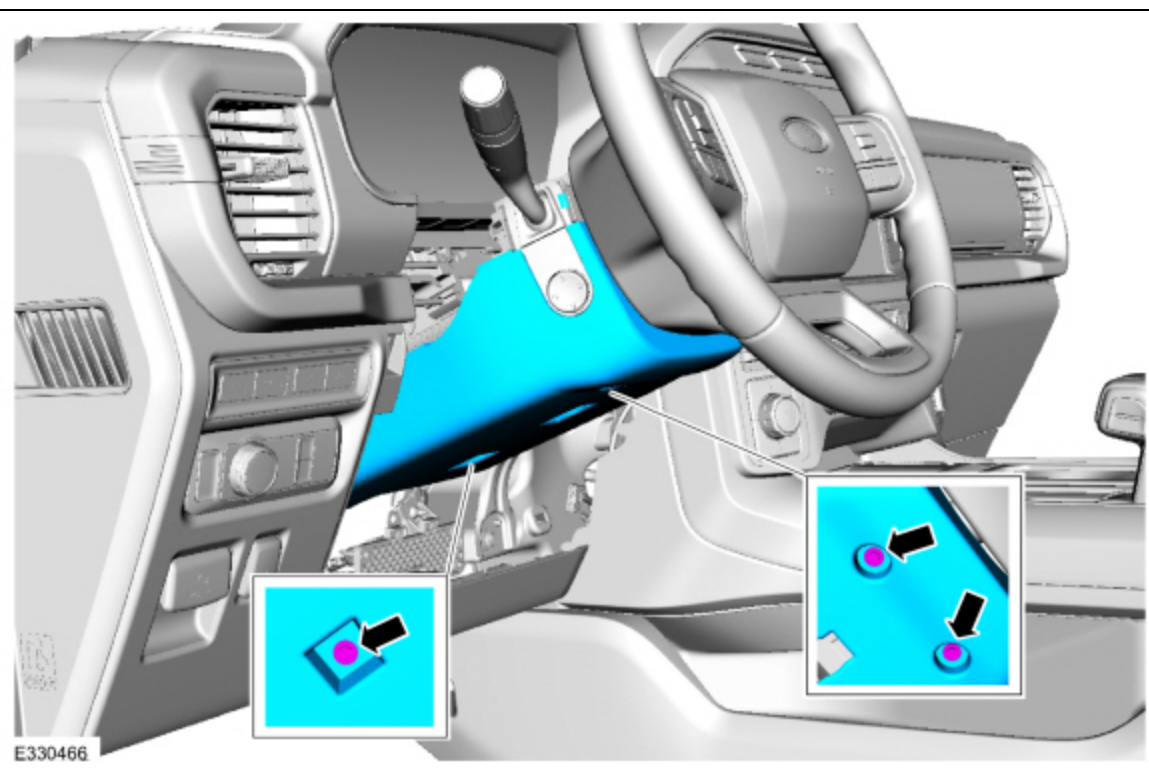

Installation

1. To install, reverse the removal procedure.