

Accessory Protocol Interface Module (APIM)

Special Tool(s) / General Equipment

Interior Trim Remover

Removal

NOTE: Removal steps in this procedure may contain installation details.


All vehicles

- NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.


Using a diagnostic scan tool, begin the PMI process for the APIM following the on-screen instructions.

- NOTE:** 12 inch screen shown, 8 inch screen is similar.

Release the clips and remove the upper centerstack bezel.
Use the General Equipment: Interior Trim Remover

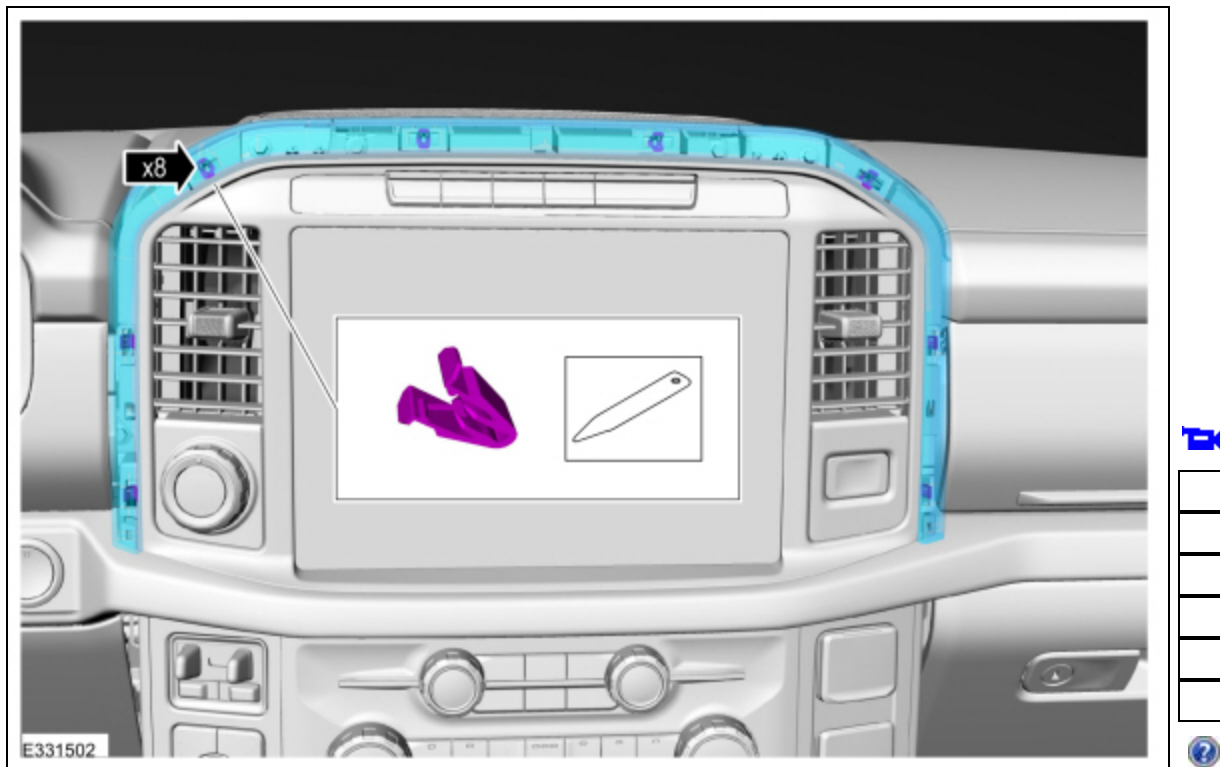


- Release the clips and remove the RH instrument center trim panel.
 - On vehicles equipped with push button start disconnect the electrical connector.
Use the General Equipment: Interior Trim Remover

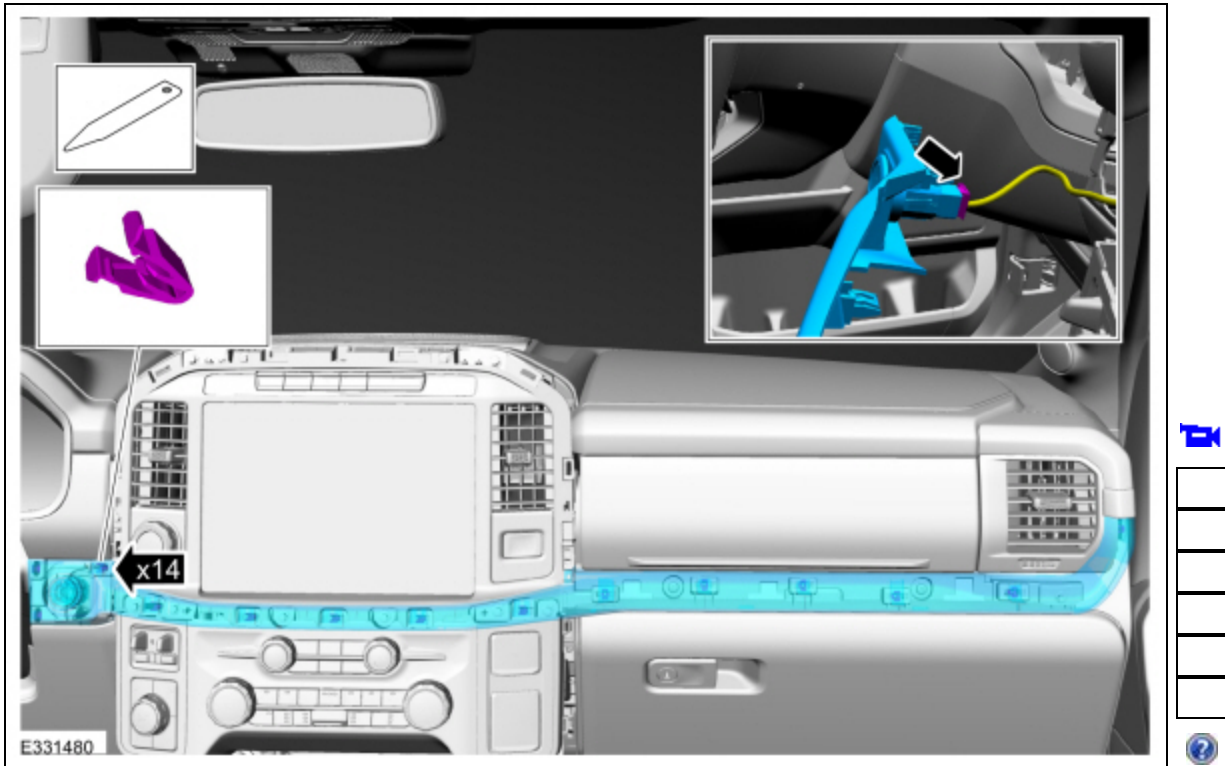


Vehicles equipped with a floor console



- 4. On vehicles equipped with a floor console.
Release the clips and remove the floor console upper RH trim panel.

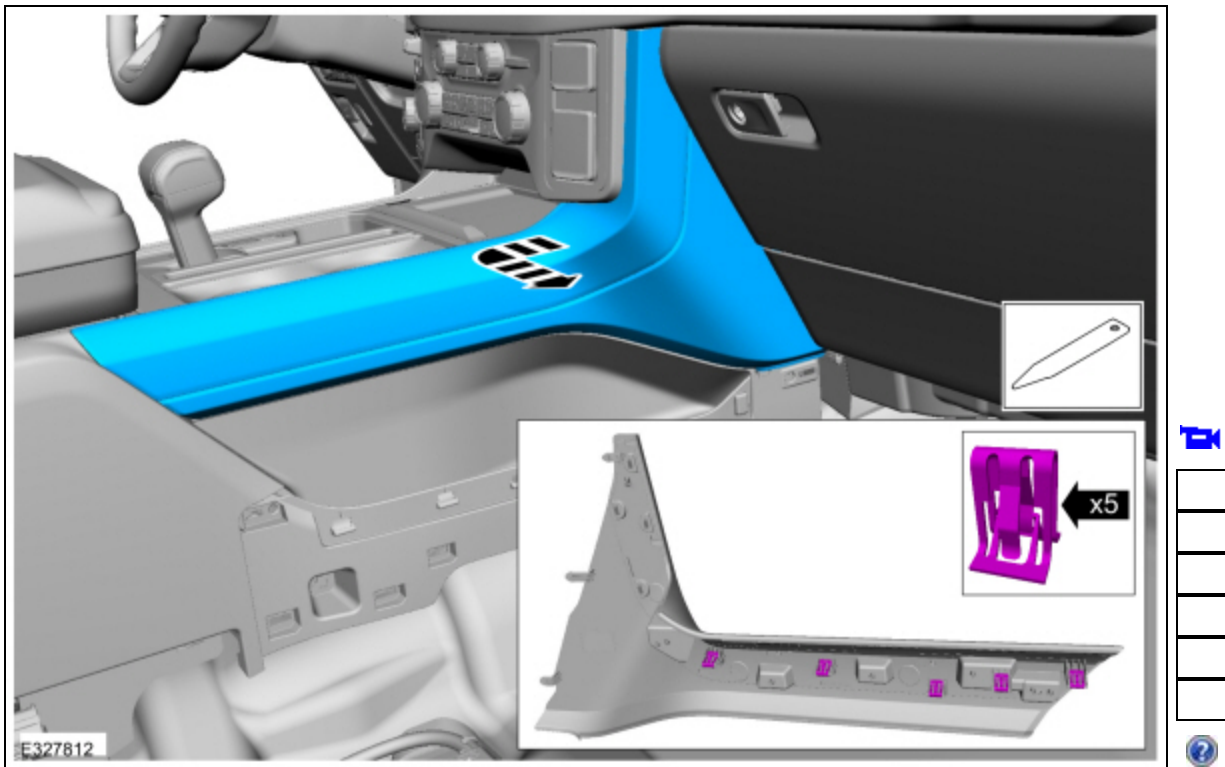

- 5. On vehicles equipped with a floor console.
Release the clips and remove the floor console upper LH trim panel.

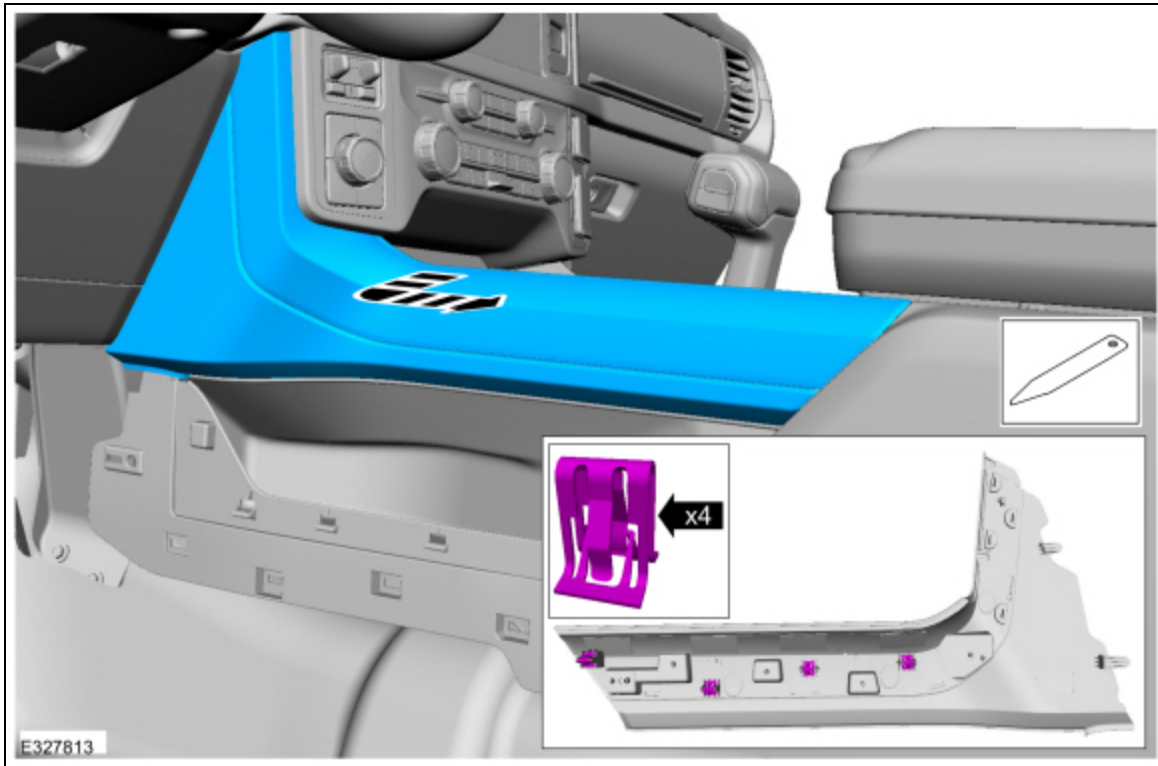


 6. Remove the lower centerstack trim panel.
 - Remove the bolts.
Torque: 22 lb.in (2.5 Nm)
 - Release the clips.
 - Disconnect the electrical connectors.

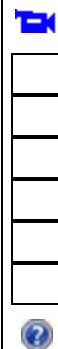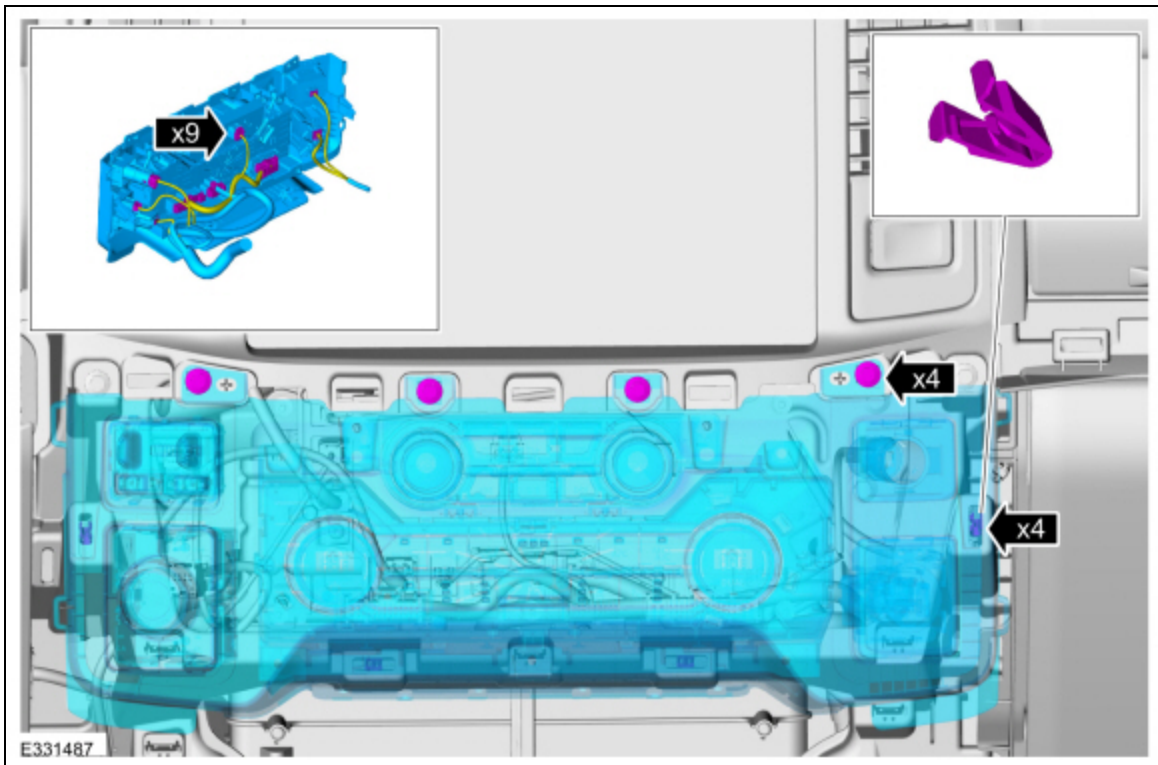


Vehicles without a floor console


7. Remove the pin-type retainers and the RH lower instrument panel closeout trim panel.

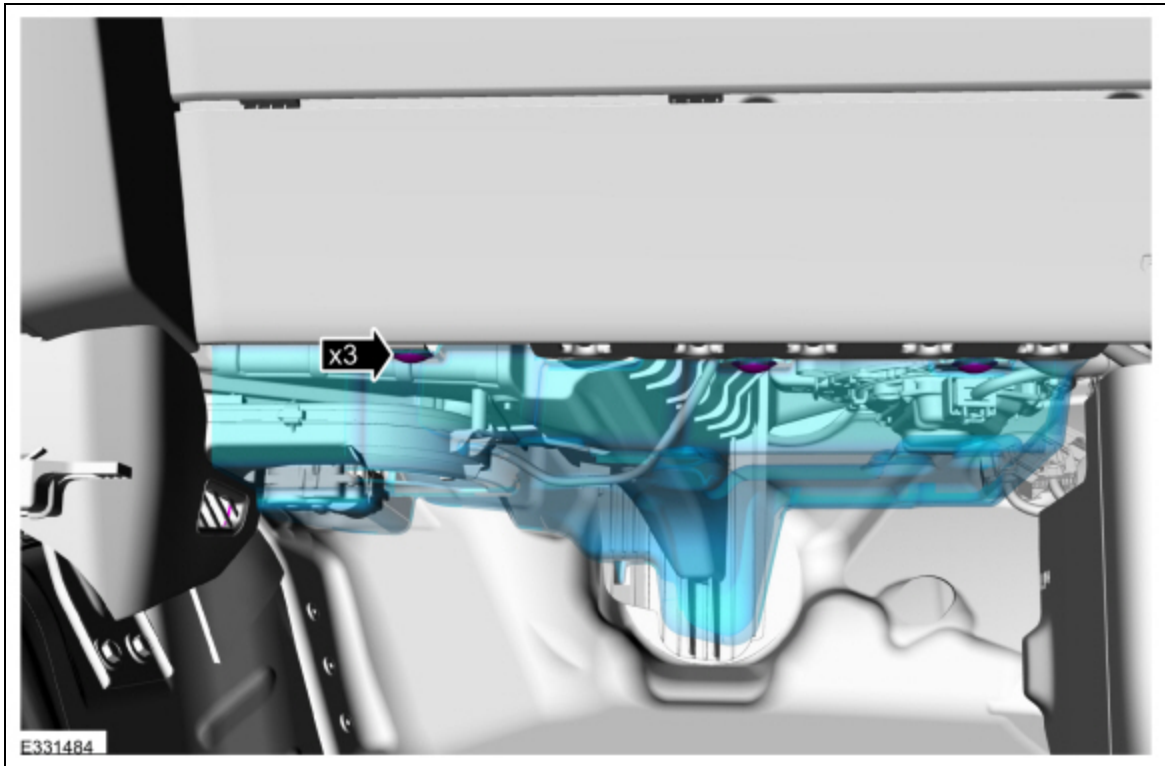


- 8. Remove the bolt.
Torque: 22 lb.in (2.5 Nm)

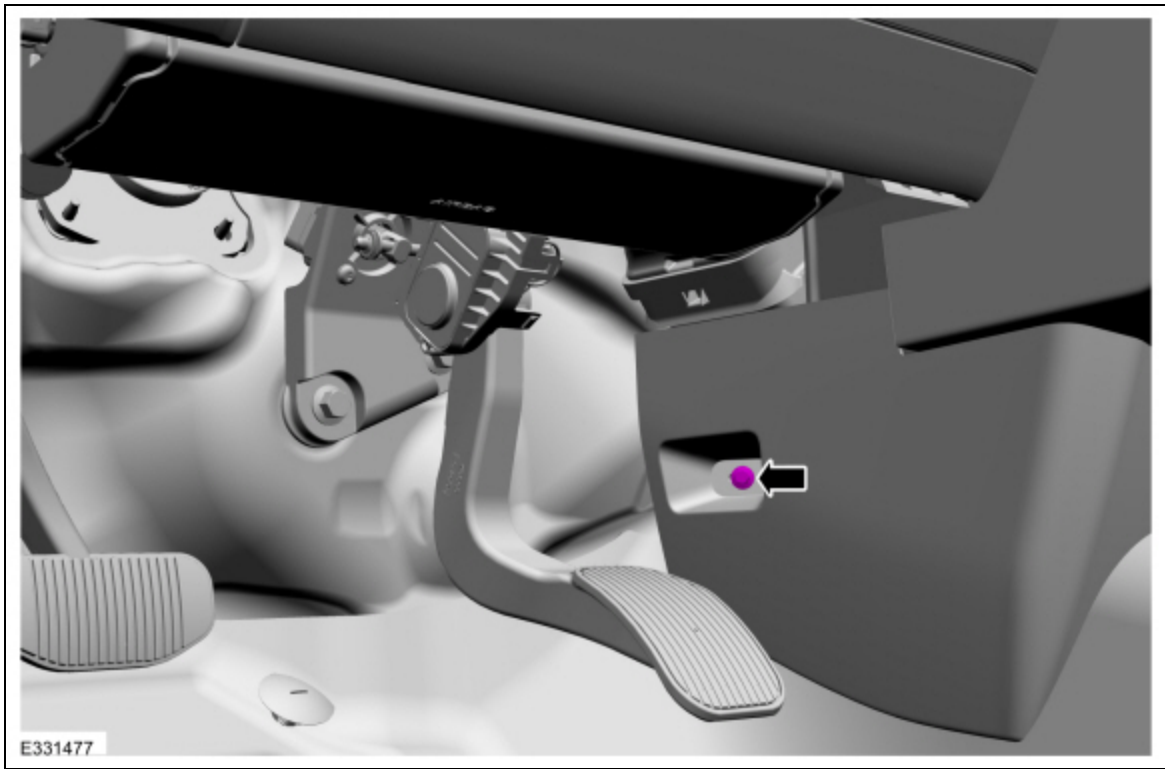



- 9. Release the clips and remove the instrument panel lower trim panel.

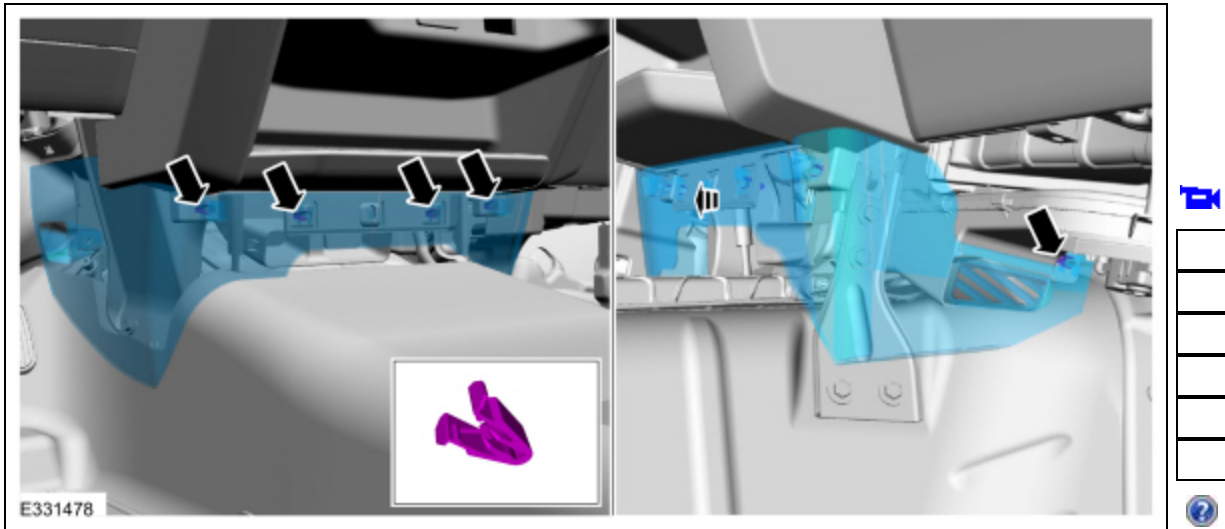


- 10. Release the clips and remove the LH lower centerstack trim panel.
Use the General Equipment: Interior Trim Remover

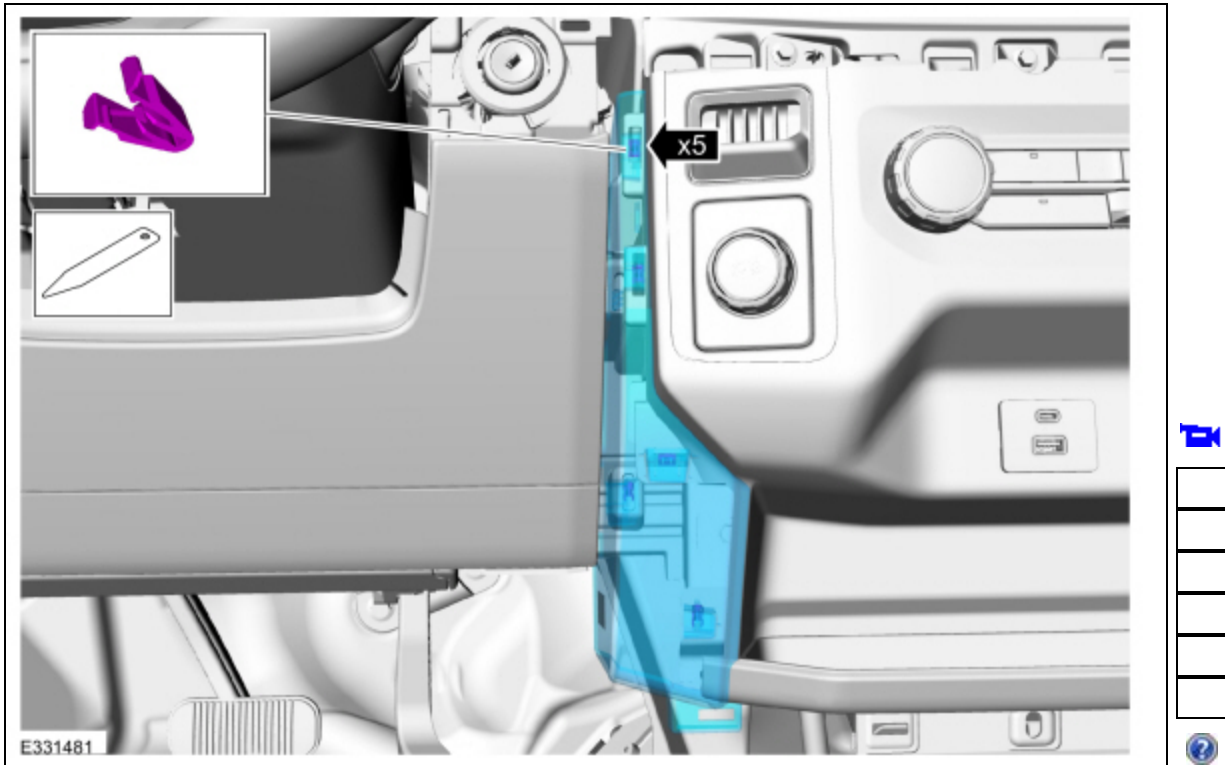

 - 11. Release the clips and remove the RH lower centerstack trim panel.
Use the General Equipment: Interior Trim Remover

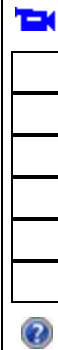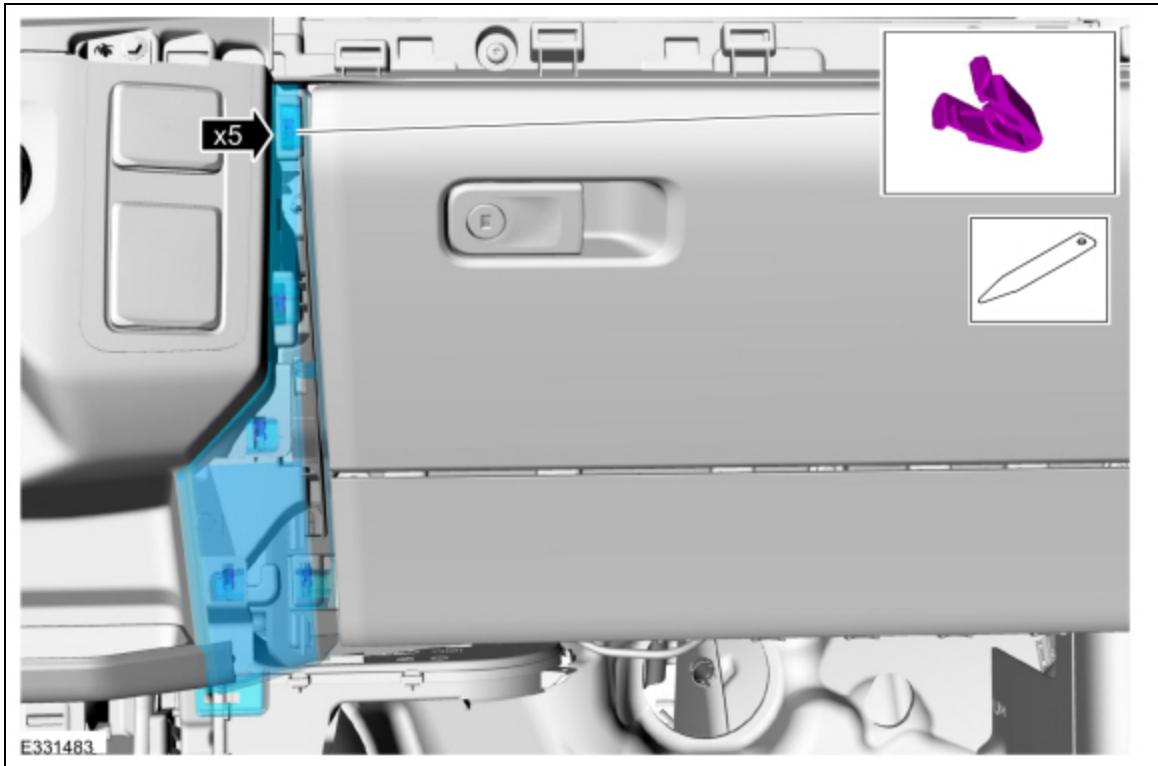


12. Remove the lower centerstack trim panel.
- Remove the bolts.
Torque: 22 lb.in (2.5 Nm)
 - Release the clips.
 - Disconnect the electrical connectors.

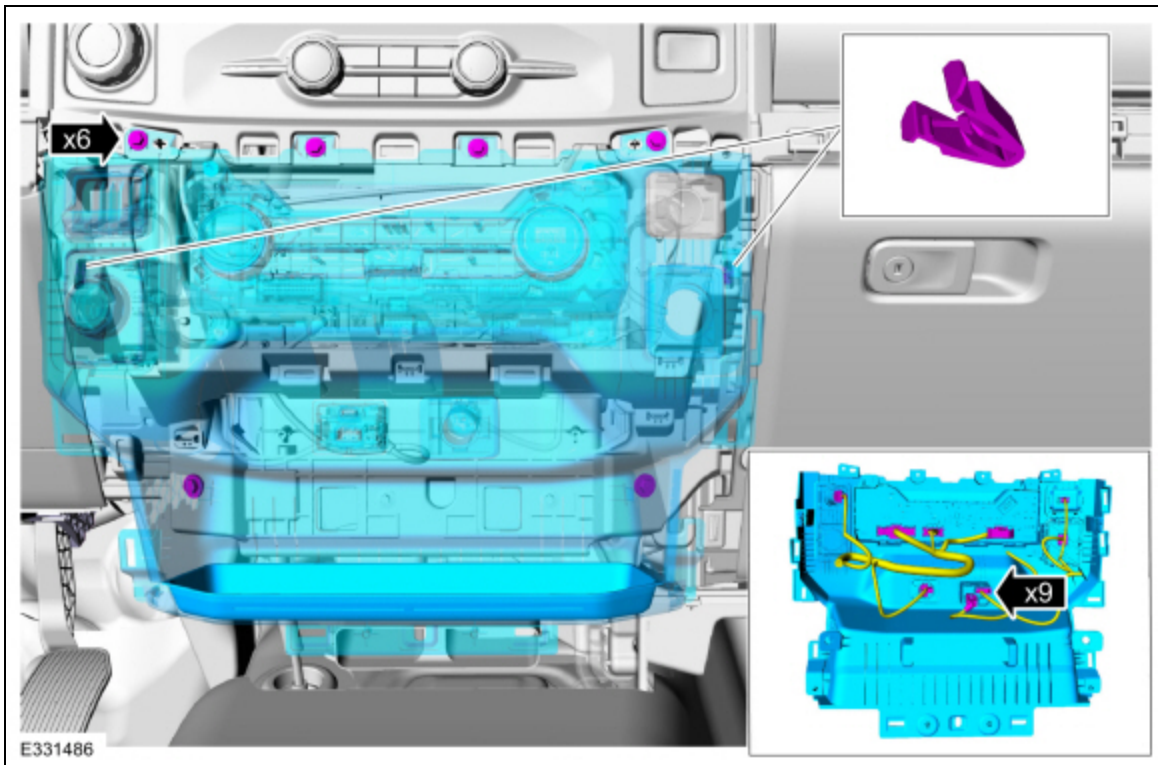

All vehicles

13. Disconnect the electrical connectors, remove the screws and the APIM .

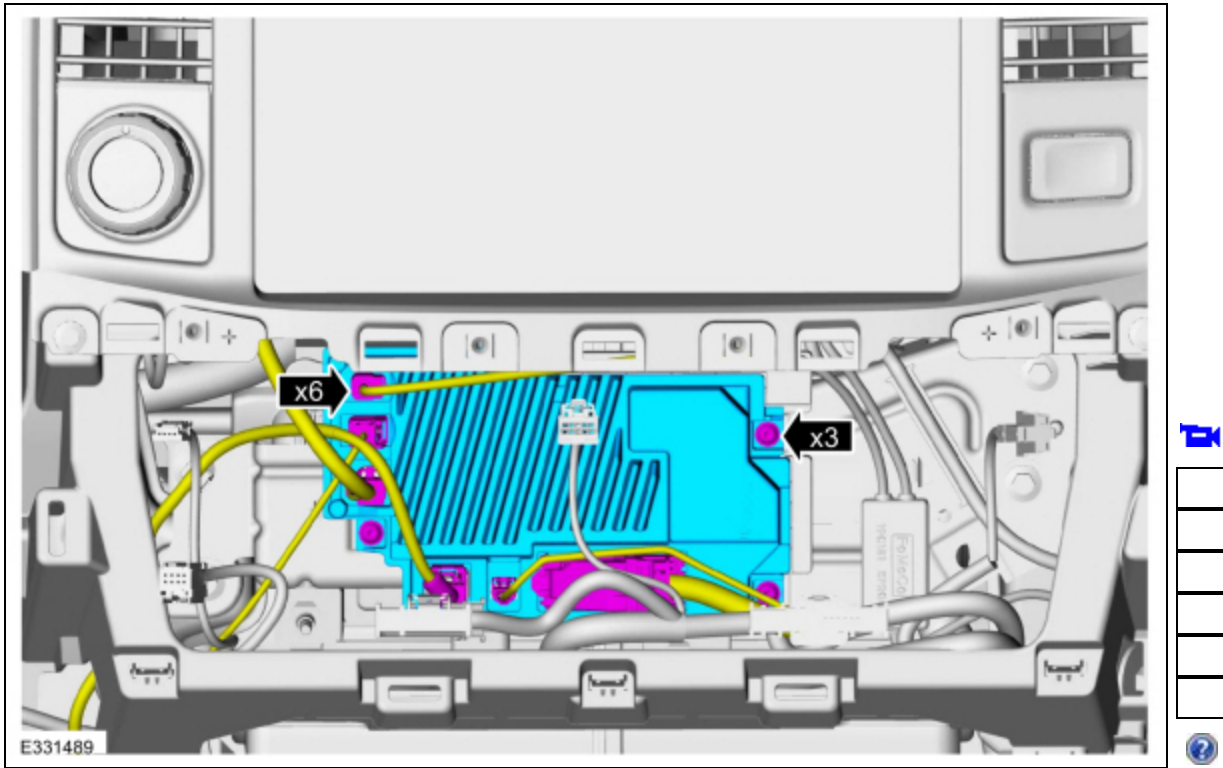

Installation

- 1. To install, reverse the removal procedure.
- 2. **NOTE:** *This step is only necessary when installing a new component.*

Using a diagnostic scan tool, complete the PMI process for the APIM following the on-screen instructions.

© Copyright 2025, Ford Motor Company.