

Transmission Cooling - Component Location

2.7L EcoBoost, 3.3L Duratec-V6, 3.5L EcoBoost With: Transmission Fluid Heat Exchanger, 5.0L 32V Ti-VCT

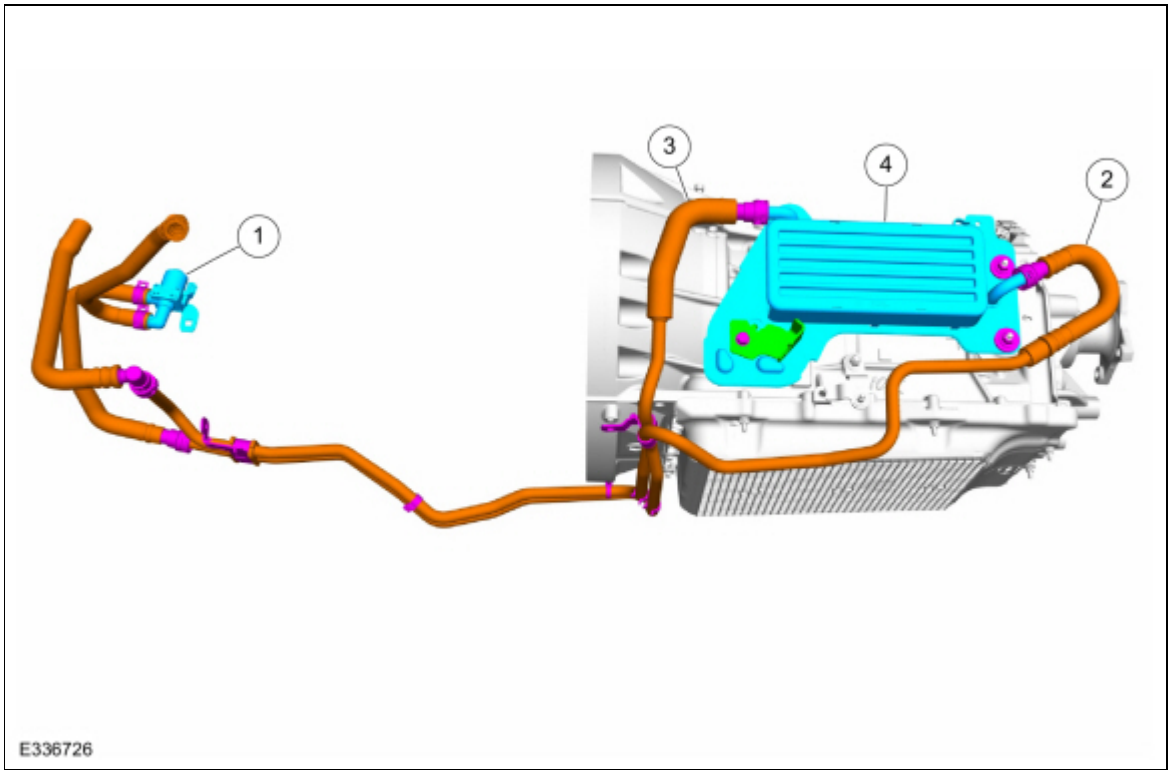


Item	Description
1	Transmission fluid heater coolant control valve
2	Transmission fluid heat exchanger coolant inlet hose
3	Transmission fluid heat exchanger coolant outlet hose
4	Transmission fluid heat exchanger

3.0L Duratorq-TDCi - V6

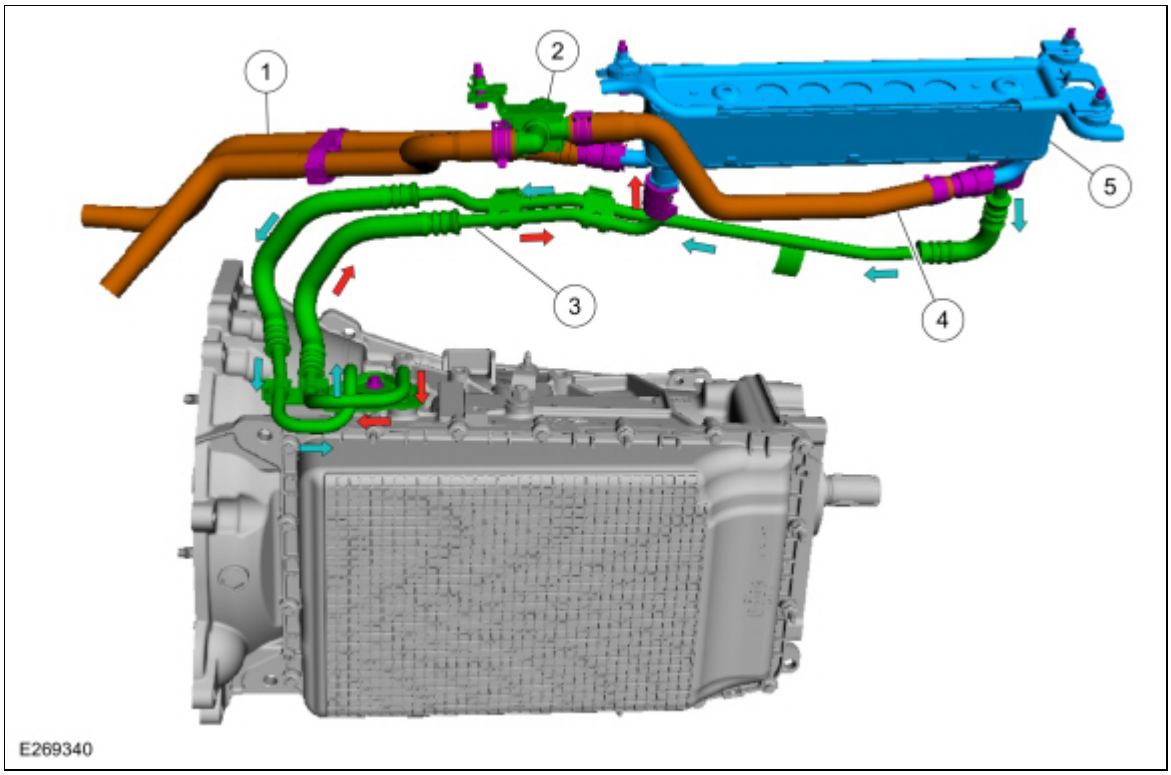

Item	Description
1	Transmission fluid heat exchanger coolant outlet hose
2	Transmission fluid heater coolant control valve
3	Transmission fluid heat exchanger tube assembly
4	Transmission fluid heat exchanger coolant inlet hose
5	Transmission fluid heat exchanger

3.5L EcoBoost With: Transmission Fluid Cooler - Air to Oil

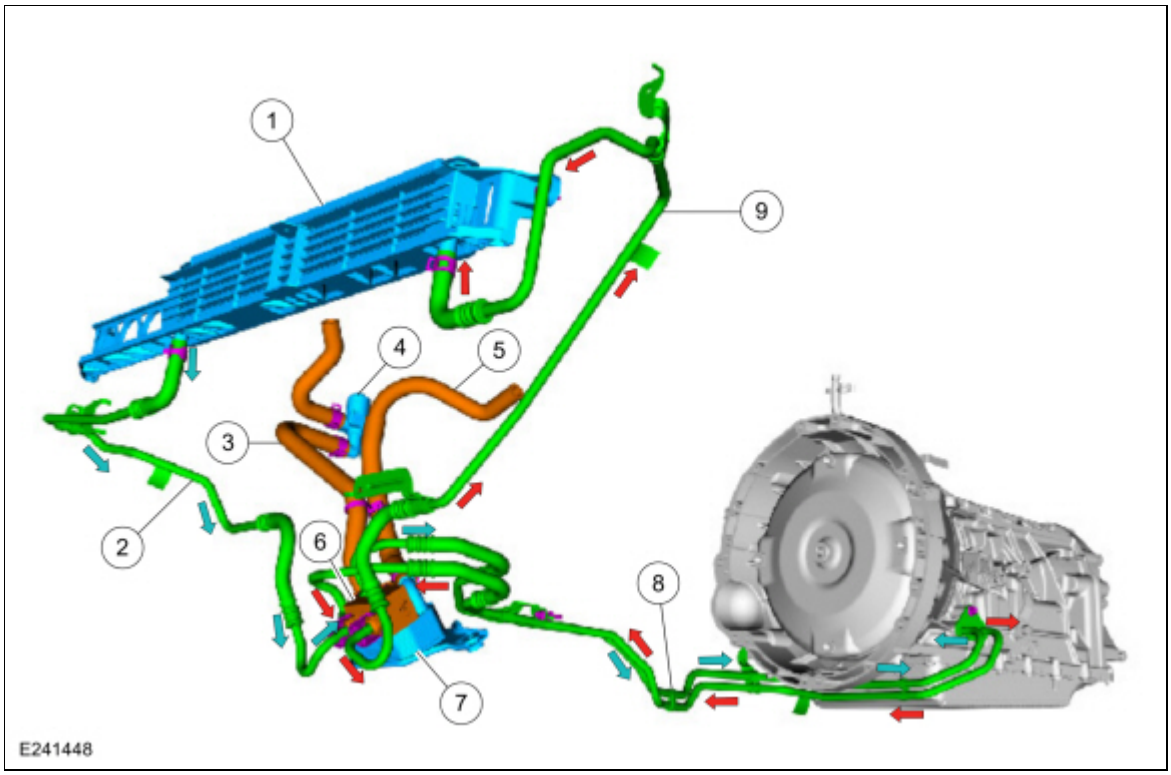

Item	Description
1	Transmission fluid cooler - air to oil
2	Transmission fluid cooler outlet hose
3	Transmission fluid warmer coolant outlet hose
4	Transmission fluid warmer coolant control valve
5	Transmission fluid warmer coolant inlet hose
6	Cooler bypass valve
7	Transmission fluid warmer
8	Transmission fluid cooler tube assembly
9	Transmission fluid cooler inlet hose

Copyright © Ford Motor Company