

EN	INSTALLATION INSTRUCTIONS TRAILER BRAKE CONTROL MODULE
D	EINBAUANLEITUNG
E	INSTRUCCIONES DE INSTALACIÓN
F	INSTRUCTIONS D'INSTALLATION
I	ISTRUZIONI DI MONTAGGIO
P	INSTRUÇÕES DE INSTALAÇÃO
NL	MONTAGEVOORSCHRIFT
DK	MONTERINGSVEJLEDNING
N	INSTALLASJONSANVISNING
S	INSTALLATIONSANVISNING
SF	ASENNUSOHJE
CZ	POKYNY K INSTALACI
H	TELEPÍTÉSI UTASÍTÁS
PL	INSTRUKCJA MONTAŻU
GR	ΟΔΗΓΙΑ ΕΓΚΑΤΑΣΤΑΣΗΣ
TR	MONTAJ TALİMATLARI
RUS	ИНСТРУКЦИЯ ПО УСТАНОВКЕ
RO	INSTRUCȚIUNE DE MONTARE
ZH-CN	安装说明
AR	تعليمات التركيب



© Copyright Ford 2020  
Printed Copies are uncontrolled



Expert Fitment Required  
Montage durch Fachmann erforderlich  
Se necesita realizar el montaje con expertos  
Montage requis par un expert  
Il montaggio deve essere effettuato da persone esperte  
É necessária montagem especializada  
Montage door erkende reparateur vereist  
Skal monteres af autoriseret værksted  
Eksperartilpasning kræves  
Verkstadsmontering är nödvändig  
Asennus tehtävä merkkikorjaamossa  
Vyžadována odborná montáž  
A szerelés csak szakműhelyben végezhető  
Wymagane przyrządy specjalistyczne  
Απαιτείται τοποθέτηση από ειδικό  
Установка должна выполняться квалифицированным специалистом  
Uzman Tarafından Takılması Gereklidir  
A se monta de către un specialist  
需要专业装配  
بإزم التثبيت بواسطة خبراء




Subject to alteration without notice  
Änderungen ohne Vorankündigung vorbehalten  
Sujeto a cambios sin previo aviso  
Susceptible de modification sans préavis  
Soggetto a modifiche senza preavviso  
Sujeito a alterações sem aviso prévio  
Kan zonder kennisgeving worden gewijzigd  
Kan ændres uden varsel  
Kan ändras uten varsel  
Kan ändras utan föregående meddelande  
Oikeudet muutoksiin pidätetään  
Může dojít ke změně bez upozornění  
Az előzetes bejelentés nélküli változtatás joga fenntartva  
Třeš může ulec změnie bez powiadomienia  
Υπόκειται σε τροποποίηση χωρίς ειδοποίηση  
Может изменяться без предварительного уведомления  
Ōnceden bildirilmeden deęişiklięe tabidir  
Poate fi modificat fără înștiințarea în prealabil  
若有变更，恕不另行通知  
عرضة للتغيير بدون إخطار

**F-150 2021**





**NOTE: It is necessary to replace the TRM with the one found in the kit. Failure to do so will result in errors when trying to configure the TRM.**

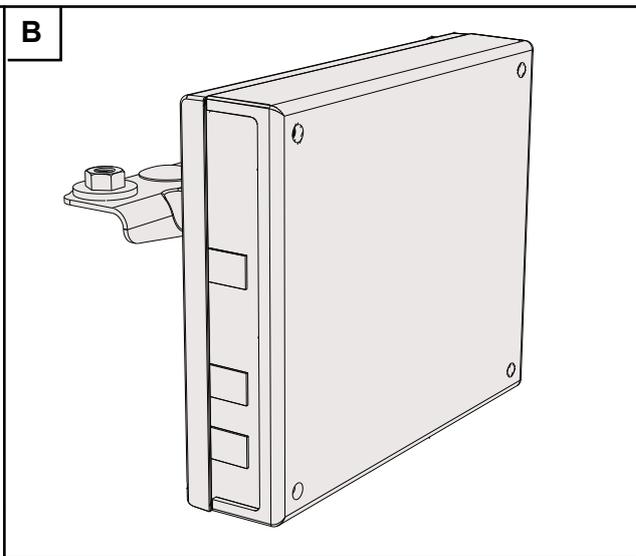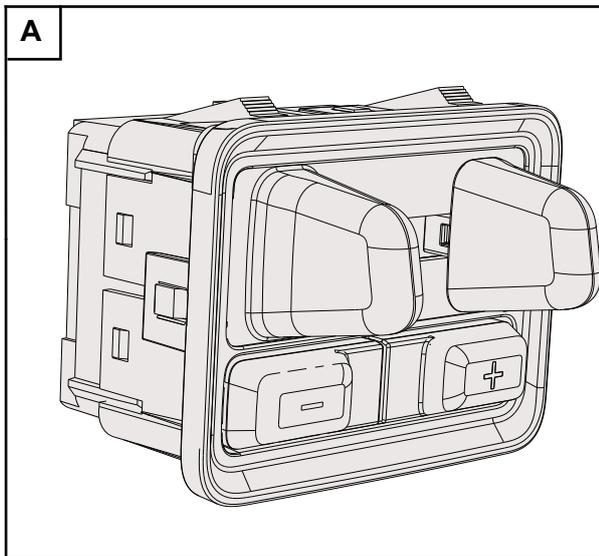


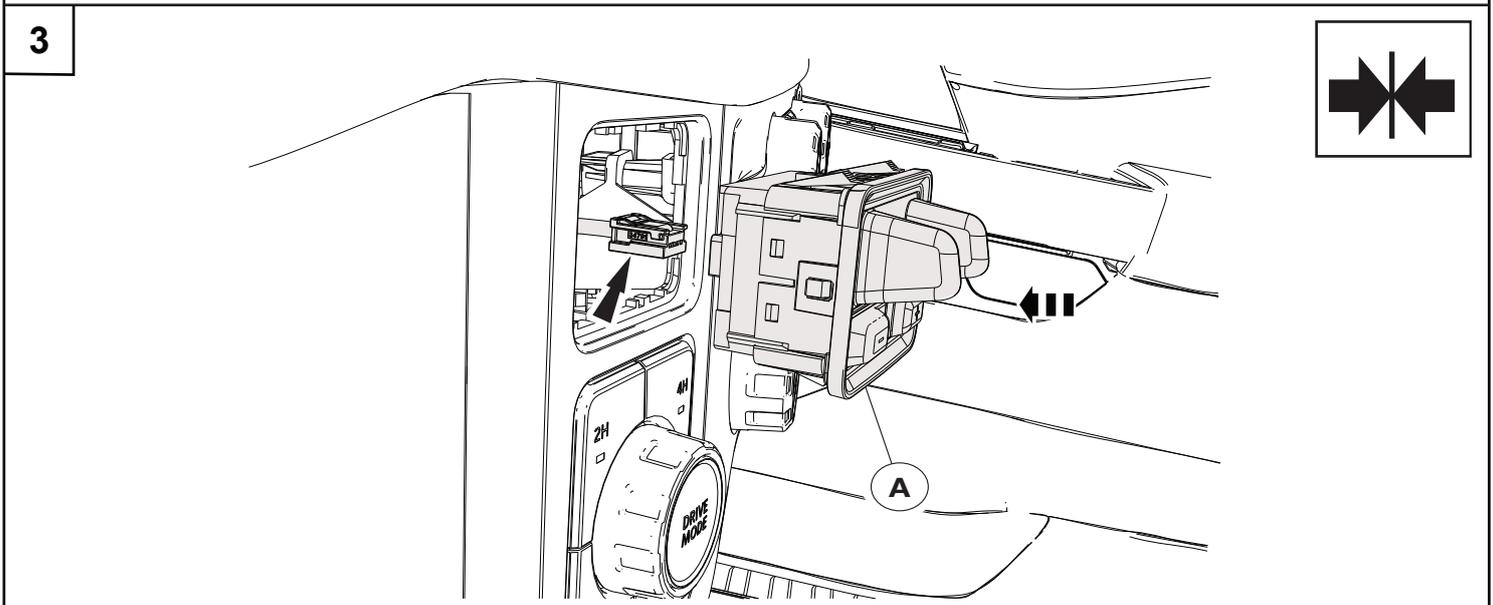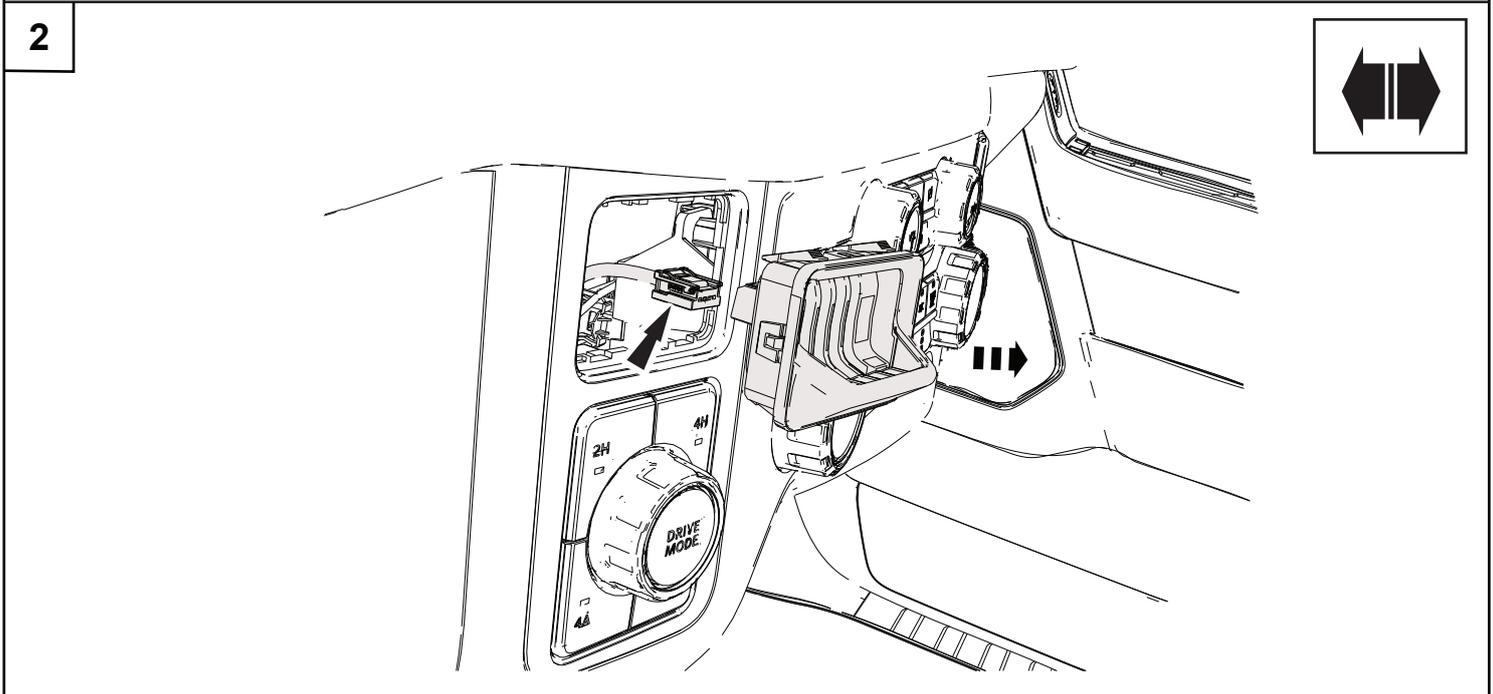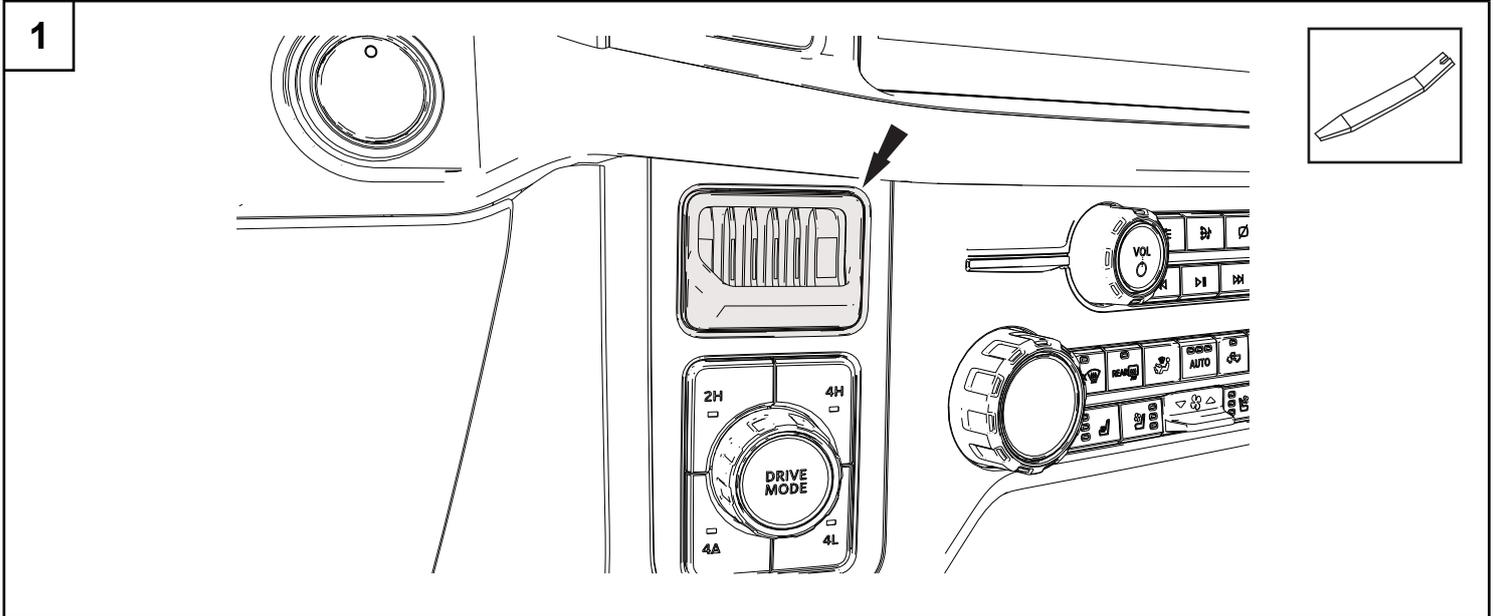


4

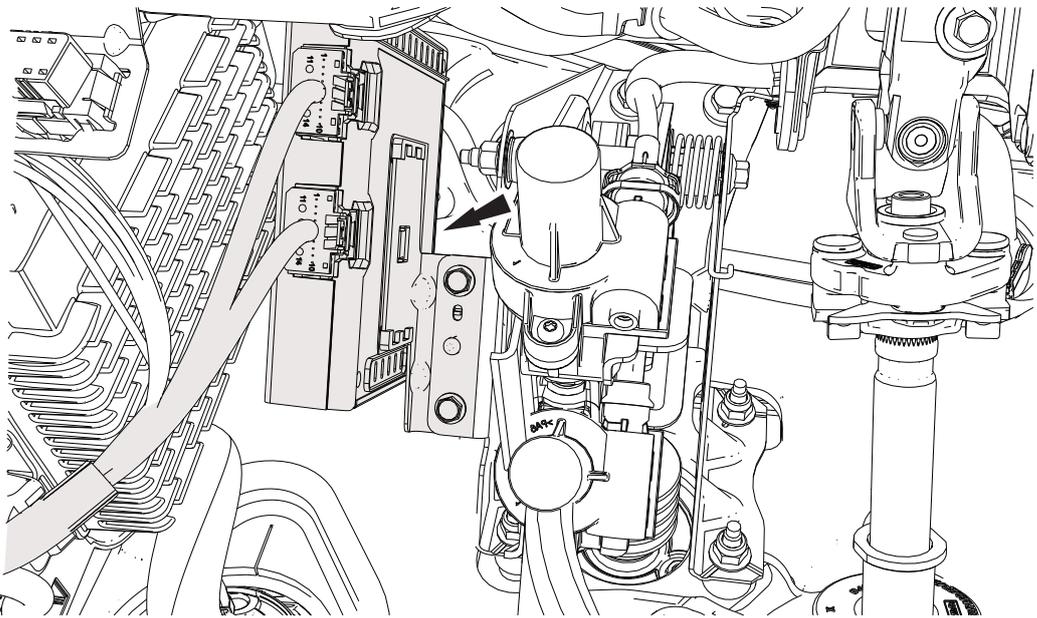
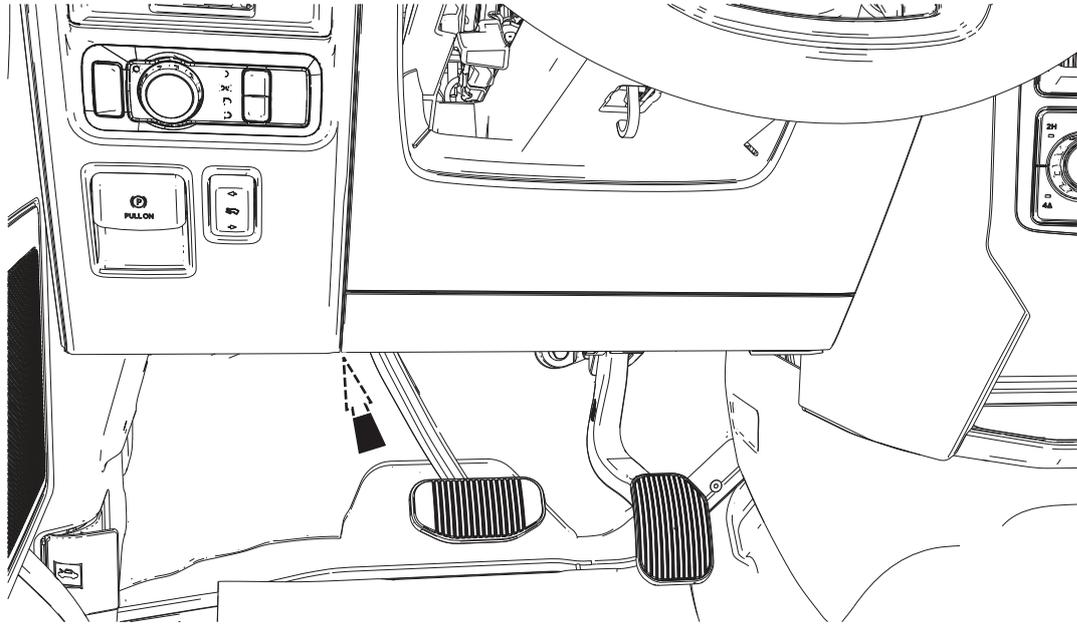


5

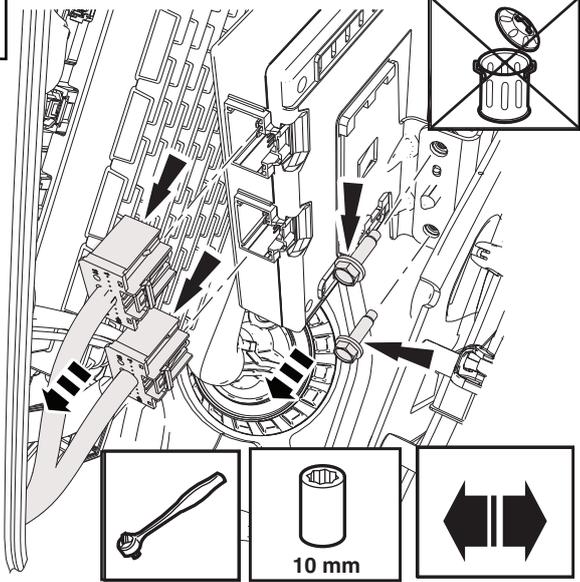

6

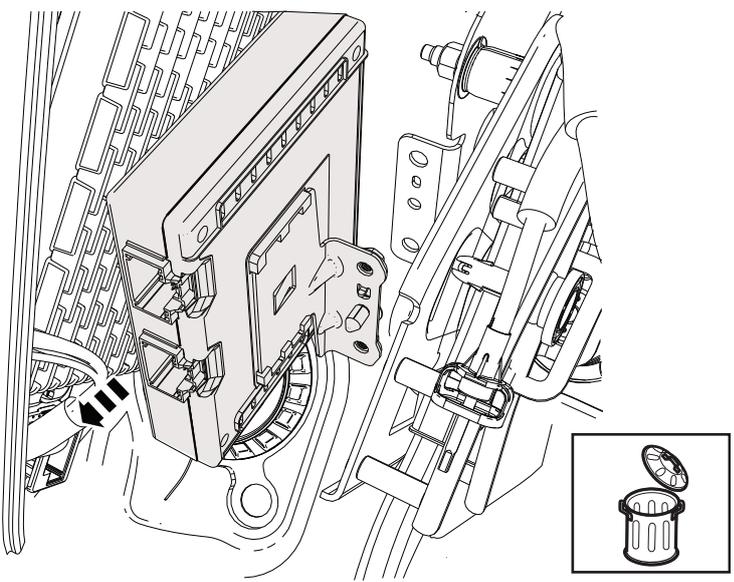

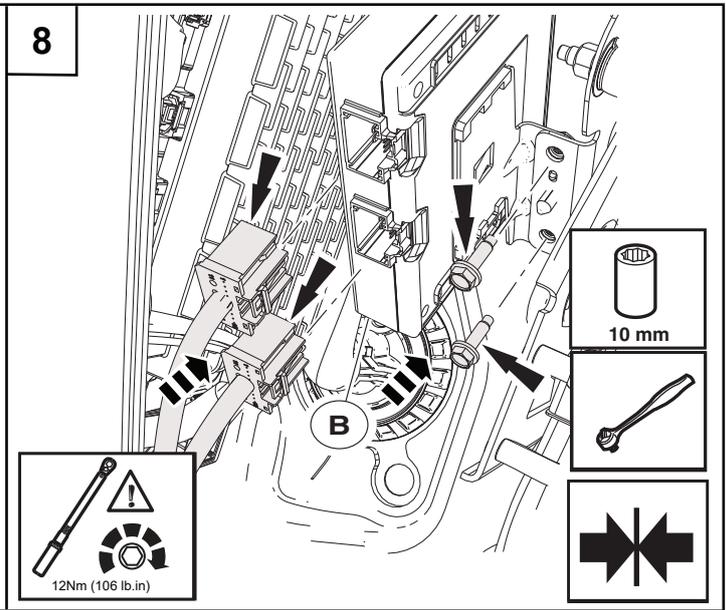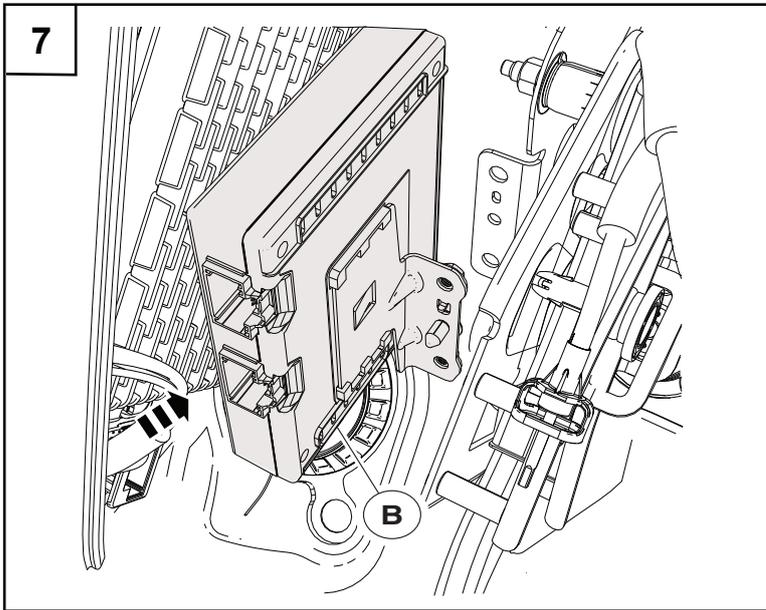



EN

**NOTE: Do not perform PMI**

1. Open Ford Diagnostic Repair System (FDRS) and Identify the vehicle.
2. Go to the Toolbox.
3. Select Instrument Panel Cluster (IPC).
4. Check IPC for software updates.
5. Update IPC if update is available.
6. Download and Run the IPC-Towbar configuration.
7. Select fixed Towbar.
8. Select genuine module (Ford).
9. Follow the screen prompts.
10. Select liftgate type.
11. Follow the screen prompts.
12. After successful completion select Exit to end configuration.
13. Select Trailer Module (TRM).
14. Download and Run TRM configuration.
15. Follow the screen prompts.
16. Download and Run the TRM-Towbar configuration.
17. Select fixed Towbar.
18. Follow the screen prompts to complete programming.
19. After successful completion select Exit to end configuration.
20. Validate the installation by making sure the trailer brake gain or a message indicating that "No Trailer is Connected" is displayed in the IPC when the TBC switch is pressed.

**Note: To clear the Rear Backup Assist Not Available warning the vehicle will need to be driven**

e.

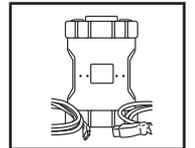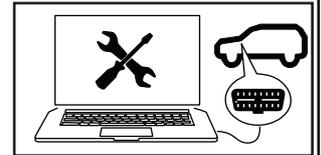

D

E

F

I

P

NL

DK

N

S

SF

CZ

H

PL

GR

TR

RUS

RO

ZH-CN

AR