



| Connector: | Description | Color | Harness | Base Part # | Service Pigtail |
|------------|----------------------------------|-------|---------|-------------|-----------------|
| C242B | IMAGE PROCESSING MODULE A (IPMA) | BK | 14A005 | part# N/A | See Below |

Check for Terminal Part Numbers

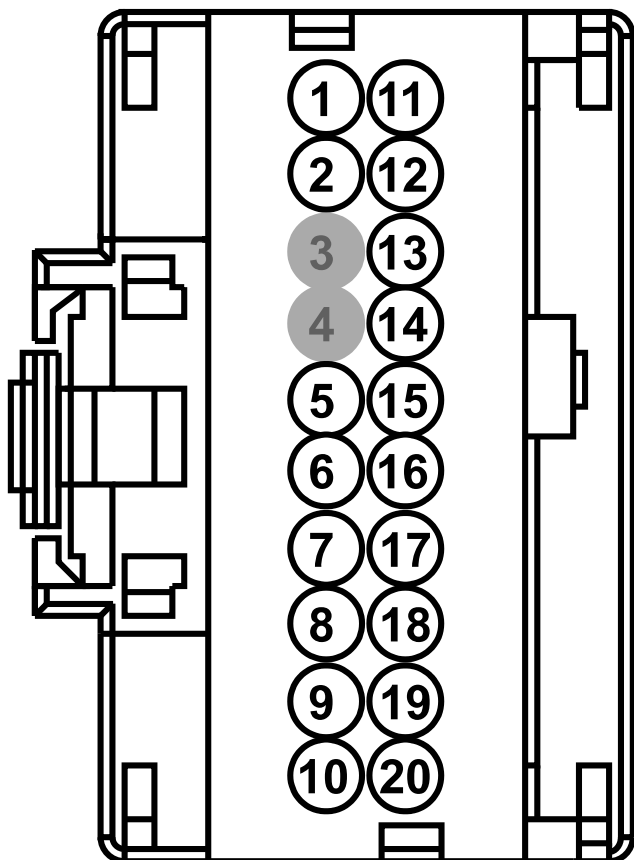

| Pin | Circuit | Gauge | Circuit Function | Qualifier |
|-----|---------------|-------|--|-----------|
| 1 | VMF33 (GN-VT) | 22 | CAMERA - LIN | |
| 2 | RMF17 (BU-BN) | 22 | CTRL MOD. - RIGHT REAR RADAR GROUND | |
| 3 | * | * | Not Used | |
| 4 | * | * | Not Used | |
| 5 | RMF16 (VT-BN) | 22 | CTRL MOD. - LEFT REAR RADAR GROUND | |
| 6 | RRB08 (BU-WH) | 22 | CTRL MOD. - LANE DEPARTURE WARNING # HEATER FRONT WINDOW - | |
| 7 | VDB50 (BU-OG) | 22 | CONNECTOR - DIAGNOSTIC # CAN BUS HIGH SPEED FD LOW | |
| 8 | VDB49 (YE-OG) | 22 | CONNECTOR - DIAGNOSTIC # CAN BUS HIGH SPEED FD HIGH | |
| 9 | RMF14 (GN-WH) | 22 | CTRL MOD. - FRONT RADAR GROUND | |
| 10 | CMP40 (WH-GN) | 22 | SWITCH - CAMERA ENABLE | |
| 11 | CMF17 (VT-GY) | 22 | CTRL MOD. - RIGHT REAR RADAR POWER | |
| 12 | VMF13 (YE) | 22 | CTRL MOD. - REAR RADAR # CAN BUS LOW | |
| 13 | VMF12 (GN) | 22 | CTRL MOD. - REAR RADAR # CAN BUS HIGH | |
| 14 | CMF16 (YE-GN) | 22 | CTRL MOD. - LEFT REAR RADAR POWER | |
| 15 | VMF13 (YE-BU) | 22 | CTRL MOD. - REAR RADAR # CAN BUS LOW | |
| 16 | VMF12 (GN-VT) | 22 | CTRL MOD. - REAR RADAR # CAN BUS HIGH | |
| 17 | CRB08 (BU-GY) | 22 | CTRL MOD. - LANE DEPARTURE WARNING # HEATER FRONT WINDOW + | |
| 18 | CMF14 (GY) | 22 | CTRL MOD. - FRONT RADAR POWER | |
| 19 | VMF05 (GY-BU) | 22 | CTRL MOD. - FORWARD SENSING # FORWARD LOOKING RADAR CAN BUS LOW | |
| 20 | VMF04 (BN-BU) | 22 | CTRL MOD. - FORWARD SENSING # FORWARD LOOKING RADAR CAN BUS HIGH | |

Available Pigtail Kits

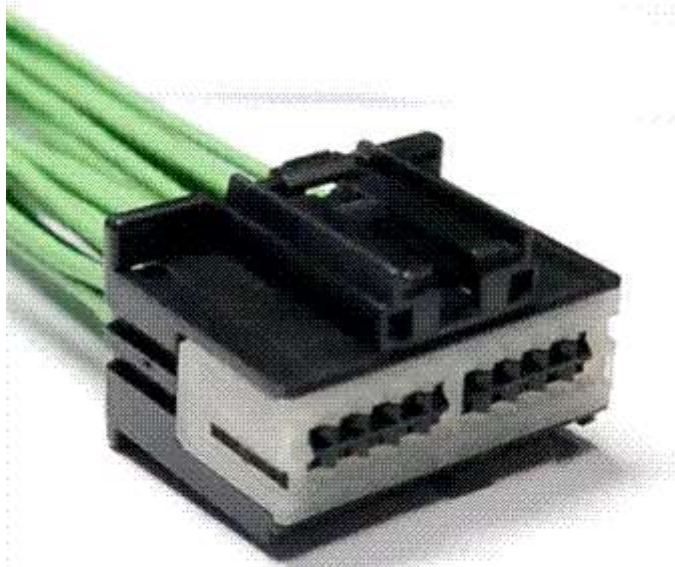Pigtail Kit Part Number WPT-1542

Service Part Number: **JU2Z-14S411-YA**

Gauge:**20**

Pin material:**Silver**

Cavities:**20**

Vehicle Uses:

- Control Head - Manual Climate
- Module - Driver Door
- Module - Electronic Automatic Temperature Control (EATC)
- Module - Front Interface
- Module - Passenger Door